

知 H3c 3600中的level几有敲system的权限

password control adds 2017-11-17 发表

问题描述

```
#
user-interface aux 0
authentication-mode password
set authentication password cipher $c$3$JbqXAiRKNrrSUFVGZnMFyNX3dLdoof1806oz3A==
user-interface vty 0
authentication-mode scheme
user privilege level 3
set authentication password cipher $c$3$swKHCChRw9fMprBVbdjBq2ncDphERBQhQnY=
protocol inbound ssh
user-interface vty 1
authentication-mode scheme
user privilege level 2
set authentication password cipher $c$3$CfDumuzEdHKRth6gcu16Q8BKvzAB+rQ=
protocol inbound ssh
user-interface vty 2 4
authentication-mode scheme
protocol inbound ssh
user-interface vty 5 15
#
```

想问下level几有敲system的权限，配置了远程，但无法敲system，level 1和4都试过了。

```
% Unrecognized command found at '^' position.
<UP>sys
<UP>sys
^
% Unrecognized command found at '^' position.
<UP>sys
<UP>sys
^
% Unrecognized command found at '^' position.
<UP>sys
<UP>sys
^
% Unrecognized command found at '^' position.
<UP>=
半:
```

解决方法

level3就有

答案来自于 赵跃【技术大咖】