

问题描述

版本: version 7.1.064, Release 9313P1901

配置DHCP 地址池, 不能放下发地址,

```
dhcp server ip-pool 0
```

```
gateway-list 10.42.0.2 network 10.42.0.0 mask 255.255.0.0
```

```
address range 10.42.0.201 10.42.255.254
```

```
dns-list 211.139.5.29 211.139.5.30
```

```
expired day 5
```

```
interface GigabitEthernet1/0/2
```

```
port link-mode route description to—o_交换机
```

```
dhcp server apply ip-pool 0
```

```
security-zone name Trust
```

```
import interface GigabitEthernet1/0/2
```

解决方法

一、配静态能否Ping到网关, 二、检查安全域, 接口有无正确加域里, 三, 检查DHCP功能正常开启没

答案来自于 [longbd](#)