


组网及说明

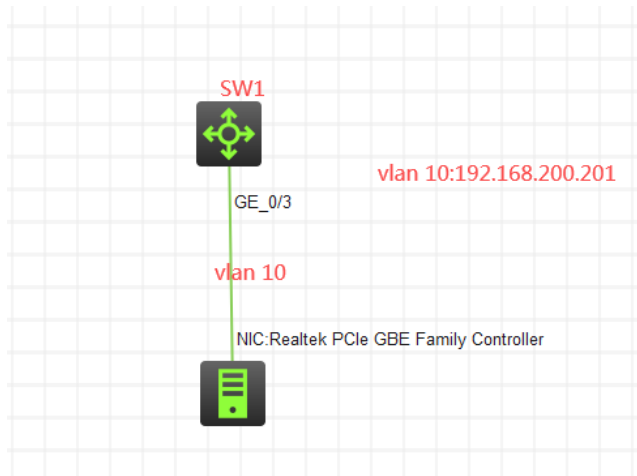

组网说明:

本案例采用H3C HCL模拟器来实现telnet远程登陆管理。

配置步骤


- 1、按照网络拓扑图正确配置IP地址及划分VLAN
- 2、SW1开启telnet功能，并创建相应账户及赋予权限

配置关键点


```
<H3C>sys
System View: return to User View with Ctrl+Z.
[H3C]sysname SW1
[SW1]vlan 10
[SW1-vlan10]quit
[SW1]int vlan 10
[SW1-Vlan-interface10]ip address 192.168.200.201 24
[SW1-Vlan-interface10]quit
[SW1]int gi 1/0/3
[SW1-GigabitEthernet1/0/3]port link-type access
[SW1-GigabitEthernet1/0/3]port access vlan 10
[SW1-GigabitEthernet1/0/3]quit
[SW1]local-user weijianing
New local user added.
[SW1-luser-manage-weijianing]password simple weijianing
[SW1-luser-manage-weijianing]service-type telnet
[SW1-luser-manage-weijianing]authorization-attribute user-role network-admin
[SW1-luser-manage-weijianing]quit
[SW1]telnet server enable
[SW1]line vty 0 4
[SW1-line-vty0-4]authentication-mode scheme
[SW1-line-vty0-4]protocol inbound all
[SW1-line-vty0-4]quit
```

测试:


物理机填写IP地址:

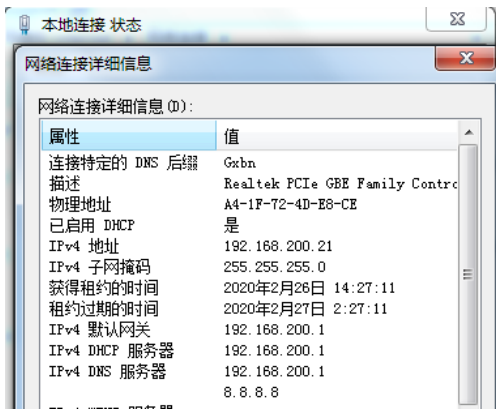


物理机能PING通SW1:

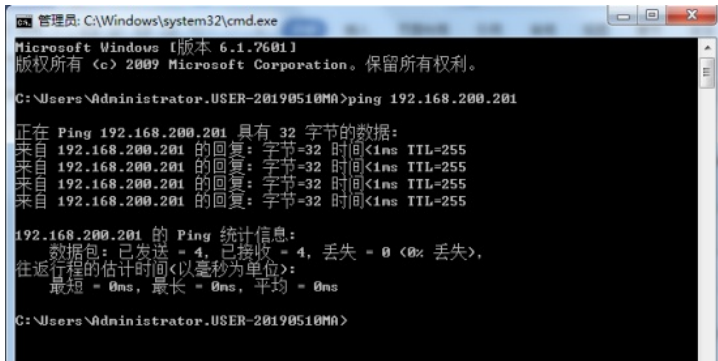

使用telnet 192.168.200.201命令, 登陆交换机:

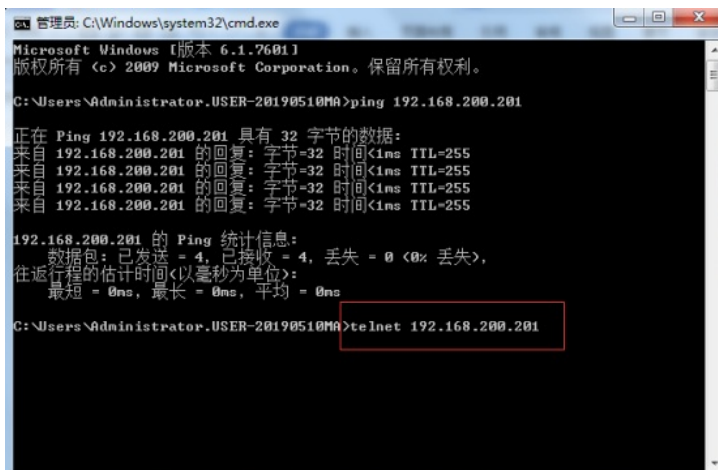

输入用户名、密码, 回车, 登陆成功:

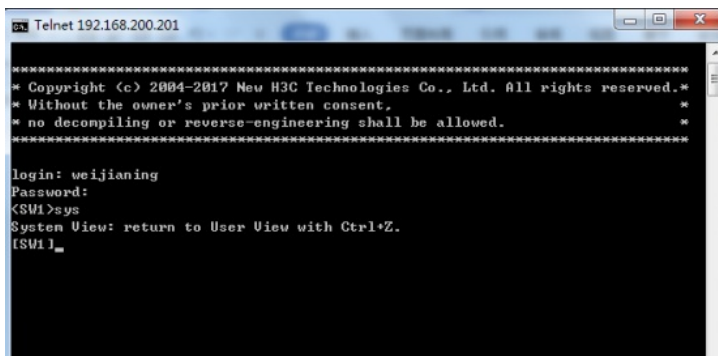

至此, telnet远程交换机典型组网配置已完成!