Manager 6.5 License Registration Guide for the first time

Cloud Computing 厉梦如 2020-03-30 Published

UIS normal networking environment

1. Obtaining host information files

To obtain UIS Manager licenses, you must first obtain host information files of the management node and download the files to the local disk.

To obtain host information files:

(1)Access the UIS Manager login page.


(2)Click Product Registration.

Figure 1 UIS Manager login page




(3) Enter the root password (admin by default), select Request or Update a License from the License Actions field, and then click Next.

Figure 2 Specifying a license action

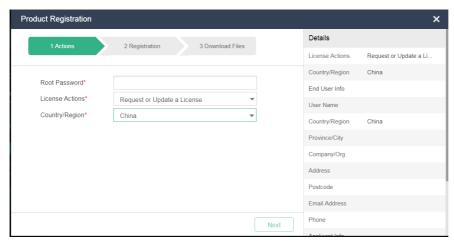

(4)Enter the end user information and applicant information, and then click Next.

Figure 3 Entering registration information

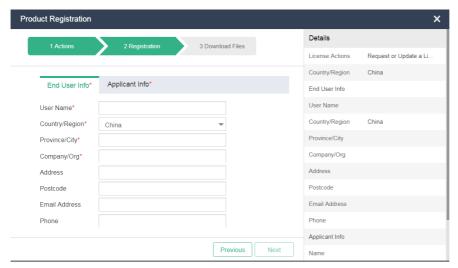

(5)Click Download.

The host information file package is downloaded to the local disk. Figure 5 and Figure 6 show the dec ompressed host information files for standalone deployment and stateful failover deployment, respectively.

Figure 4 Downloading host information files

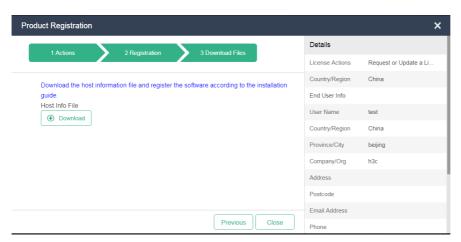


Figure 5 Host information files for standalone deployment


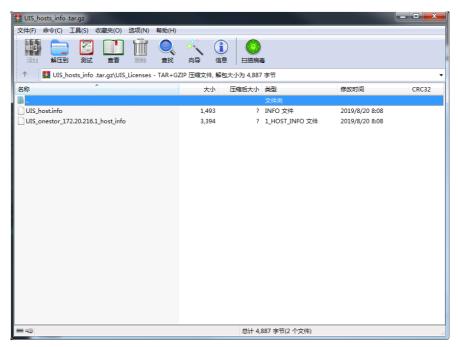


Figure 6 Host information files for stateful failover deployment

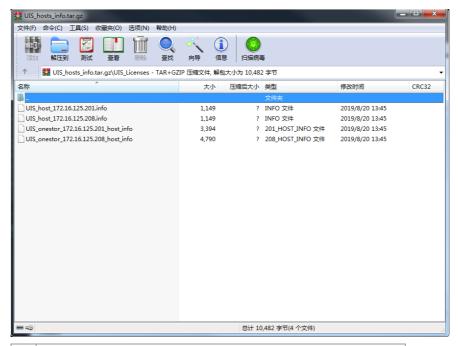

NOTE

- UIS_host.info is the host information file for the UIS management node, and UI S_onstor_ip_host.info is the host information file for the distributed storage management node
- · Do not edit the names of the host information files.
- \cdot In a stateful failover environment, you will get two sets of host information files, which are distinguished by the management IP addresses of the primary and backup management nodes.

2. Obtaining license keys

UIS Manager provides official license keys and temporary license keys.

(1)Official license keys

In a formal project, the license keys are included in the software license certificates attached to the d elivered equipment. Figure 7 shows the software license certificates of a project.

Figure 7 Software license certificates



(2)Temporary license keys

To obtain temporary license keys, contact the franchiser or H3C sales.

3. Obtaining activation files

3.1 Obtaining the UIS and CAS activation file

(1) Access http://www.h3c.com/en/Support/Online_Help/License_Service/.


Figure 8 Product licensing



(2)Click Register the First Time.

(3)Select Cloud_H3C UIS HCI Platform as the product category.

Figure 9 Obtaining the UIS and CAS activation file

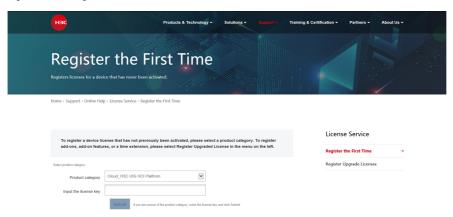

(4)In the License information field, upload the UIS and CAS license keys from an excel file or enter th e license keys.

Figure 10 Uploading or entering the UIS and CAS license keys



(5)In the Device information field, upload file UIS_host.info.

(6)To obtain a stateful failover activation file, selectStateful failover for the Select failover type parame ter, enter the service contract number, and upload the host information files for the primary and backup devices.

NOTE:

To view the UIS, CAS, or ONEStor service contract number, access the H3C websit e, open the Support > Online Help > Warranty Query page, and then enter the softw are serial number.

Figure 11 Obtaining a stateful failover activation file[XR更新1]



(7)Enter the contact information, and then click Get activation key or file.

Figure 12 Entering contact information

Contact Information	
Customer	
company/organization	
Company/Organization	
First name	•
Last name	
Phone number	
Email address	
Zip code	
Address	
Project name	
Verify code	8763
	☐ I accept all terms of H3C Legal Statement *


Get activation key or file

Cancel

3.2 Obtaining the ONEStor activation file

(1)Access http://www.h3c.com/en/Support/Online_Help/License_Service/.


Figure 13 Product licensing

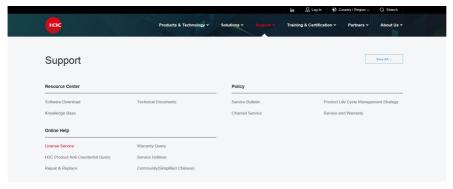

(2)Click Register the First Time.

 $\textbf{(3)} Select\ Distributed\ Storage_H3C\ ONEStor\ as\ the\ product\ category.$

Figure 14 Obtaining the ONEStor activation file

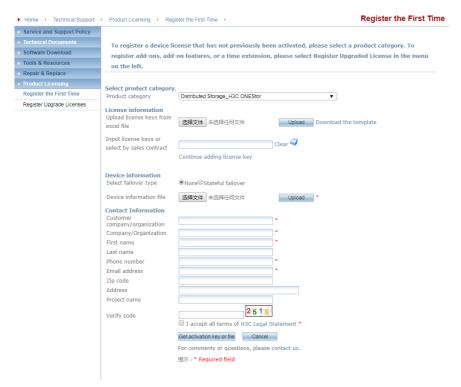

- (4)In the License information field, upload the ONEStor license keys from an excel file or enter the license keys.
- (5)In the Device information field, upload file UIS_onstor_ip_host.info.


The ip argument represents the IP address of the management node.

- **(6)**To obtain a stateful failover activation file, selectStateful failover for the Select failover type parame ter, and then upload the host information files of the primary and backup devices.
- (7)Enter the contact information, and then click Get activation key or file.

4. Registering the licenses


- (1)Log in to UIS.
- (2)Click System on the top navigation bar.
- (3) From the navigation pane, select Licensing.
- (4)Click Register License.

Figure 15 License management page

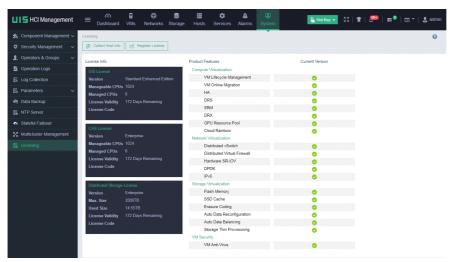

(5)Click Browse to select the UIS and CAS activation file (.lic) and the distributed storage activation file (.lic), and then click OK.

Figure 16 Registering licenses

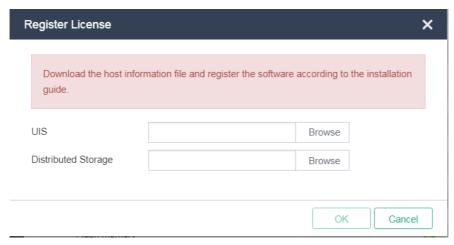

After the licenses are registered successfully, you can view license information on the license manag ement page.

Key Configuration