

## 组网及说明

### 适用产品系列

本案例适用于软件平台为Comware V7系列防火墙：如F5080、F5060、F5030、F5000-M等F5000、F5000-X系列的防火墙。

## 配置步骤

### Console口密码丢失恢复操作

#设备启动过程中根据提示按 ctrl+B进入 bootware界面，选择 <8>跳过 Console 密码认证

```
System is starting...
Press Ctrl+D to access BASIC-BOOTWARE MENU...
Press Ctrl+T to start heavy memory test.
Booting Normal Extended BootWare
The Extended BootWare is self-decompressing....Done.

*****
*                               *
*           H3C SecPath BootWare, Version 1.06           *
*                               *
*****
Copyright (c) 2004-2017 New H3C Technologies Co., Ltd.

Compiled Date       : Mar 23 2017
Memory Type        : DDR3 SDRAM
Memory Size        : 1024MB
Memory Speed       : 667MHz
Flash Size         : 16MB
Nandflash Size    : 256MB
PCB Version        : Ver.A

BootWare Validating...
Press Ctrl+B to access EXTENDED-BOOTWARE MENU...

Password recovery capability is enabled.
Note: The current operating device is flash
Enter < Storage Device Operation > to select device.

===== <EXTENDED-BOOTWARE MENU> =====
|<1> Boot System
|<2> Enter Serial SubMenu
|<3> Enter Ethernet SubMenu
|<4> File Control
|<5> Restore to Factory Default Configuration
|<6> Skip Current System Configuration
|<7> BootWare Operation Menu
|<8> Skip Authentication for Console Login
|<9> Storage Device Operation
|<0> Reboot
=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+C: Display Copyright
Ctrl+F: Format File System
Enter your choice(0-9): 8
```

#选择<0> Reboot重启后进入命令行，同时将Console口登录认证删除或者重置 Console口密码。

例如：将Console口登录认证删除：

```
<H3C>system-view
[H3C]line con 0
[H3C-line-console0]authentication-mode none
[H3C-line-console0]quit
[H3C]save force
```

## 配置关键点

### 需要的工具环境及注意事项

使用Console口登录设备，参考Console登录设备方法