

Wireless 龚训杰 2020-09-18 Published

Problem Description

How to telnet AP

1. AP is not online:

Telnet AP directly, the default password is h3capadmin.

2. AP is online:

First perform the following operations on AC:

[H3C]probe

[H3C-probe]wlan ap-execute name *** exec-console enable

Then telnet can be.

The default password is h3capadmin.