

知 How can I configure clients to automatically access another WLAN when the uplink of the associated AC is down?

Wireless 龚训杰 2020-09-27 Published

Problem Description

How can I configure clients to automatically access another WLAN when the uplink of the associated AC is down?

Solution

Enable the AC uplink detection function.