Wireless 龚训杰 2020-09-27 Published

How can I view the number of AP licenses?

Execute the display wlan ap all command. The output from this command is displayed as foll ows:

<AC> display wlan ap all

Total number of APs: 1

Total number of connected APs: 1

Total number of connected manual APs: 1 Total number of connected auto APs: 0 Total number of connected common APs: 1

Total number of connected WTUs: 0 Total number of inside APs: 0

Maximum supported APs: 1024 Remaining APs: 1023 Total AP licenses: 128

Local AP licenses: 128 Server AP licenses: 0

Remaining local AP licenses: 127

Sync AP licenses: 0

AP information

 $State: I = Idle, \qquad J = Join, \qquad JA = JoinAck, \qquad IL = ImageLoad$ C = Config, DC = DataCheck, R = Run M = Master, B = Backup

AP name APID State Model Serial ID

ap1 1 R/M WA538 219801A1NN9182032213