

#### Problem Description

VXLAN related functions are restricted by the switch working mode.

#### Solution

To use VXLAN related functions, be sure to change the switch to VXLAN working mode through "switch-mode 1", otherwise the VXLAN function will not take effect.

Use switch-mode to specify an operating mode for the device.

# Set the operating mode to VXLAN mode for the device.

```
<Sysname> system-view
```

```
[Sysname] switch-mode 1
```

Reboot device to make the configuration take effect.