

Divide the 40G interface into 4 10G interfaces

Switches 龚训杰 2020-10-12 Published

Divide the 40G interface into 4 10G interfaces

Split the 40GE interface FortyGigE1/0/1 into four 10GE interfaces.

<System> system-view

[System] interface fortygige 1/0/1

[System-FortyGigE1/0/1] using tengige

The interface FortyGigE1/0/1 will be deleted. Continue? [Y/N]:y

#Combine the 10GE interface split from the 40GE interface into a 40GE interface.

<System> system-view

[System] interface ten-gigabitethernet1/0/1:1

 $[System-Ten-Gigabit Ethernet 1/0/1:1] \ \textbf{using fortygige}$

The interfaces Ten-GigabitEthernet1/0/1:1 through Ten-GigabitEthernet1/0/1:4 will be deleted. Contin ue? [Y/N]:y