

知 如何查看端口的类型?

VLAN 新人报到 2018-02-09 发表

问题描述

如何查看端口的类型?

解决方法

```
display interface FortyGigE2/0/49
FortyGigE2/0/49
Current state: DOWN
Line protocol state: DOWN
IP packet frame type: Ethernet II, hardware address: b0f9-6339-e896
Description: FortyGigE2/0/49 Interface
Bandwidth: 40000000 kbps
Loopback is not set
Media type is not sure, port hardware type is No connector
Unknown-speed mode, unknown-duplex mode
Link speed type is autonegotiation, link duplex type is autonegotiation
Flow-control is not enabled
Maximum frame length: 10000
Allow jumbo frames to pass
Broadcast max-ratio: 100%
Multicast max-ratio: 100%
Unicast max-ratio: 100%
PVID: 1
MDI type: Automdix
Port link-type: Access
Tagged VLANs: None
Untagged VLANs: 1
Port priority: 0
Last link flapping: Never
Last clearing of counters: Never
```

答案来自于 [墨峰](#)