



How to restrict users who log in to AC GUI?

Wireless

龚训杰

2020-11-20 Published

Problem Description

How to restrict users who log in to AC GUI?

Solution

Enable the HTTP service and apply the ACL to the HTTP service so only a Web user on Host B can access the AC.

```
[AC] ip http enable
```

```
[AC] ip http acl 2030
```