

Cannot log in to the AC through the web, and it prompts that the web page cannot be displayed.

Wireless 龚训杰 2020-12-11 Published

FAT AP

The PC cannot log in to the AC through the web, and it prompts that the web page cannot be display ed, but the AC can be pinged from the PC, or you can log in to the AC via telnet.

(1) This phenomenon can happen occasionally after the firewall that comes with the windows systemis turned on. (2) The http function on the device is disabled, you can log in to the AC through telnet to view it through the command line.

- (1) Turn off the windows firewall.
- (2) Log in to the AC via telnet, check the AC configuration, and enable the http function.ip http enabl