



How to view AC version information?

Wireless

河然·吐尔生别克

2020-12-11 Published

Problem Description

How to view AC version information?

Solution

Use the command: display version

If you need to view the detailed version

Use command : _display version