

## 知 In the FIT AP architecture, how is data forwarded by default?

Wireless 翁磊 2020-12-14 Published

### Problem Description

In the FIT AP architecture, how is data forwarded by default?

### Solution

By default, FIT AP uses centralized forwarding, that is, all messages of end users are forwarded to AC via AP, and then uniformly forwarded by AC. If data need not be forwarded through the AC, the local forwarding function can be used, which requires special configuration.