

## 知 Switch between the main and standby ACs, the main AC cannot switch back

Wireless 余煌 2020-12-15 Published

### Network Topology

mull

### Problem Description

After the main AC failure is restored, the AP and Client are still connected to the standby AC and cannot automatically switch back to main AC.

### Process Analysis

The AP priority configured on the main AC is not 7

### Solution

Set the AP priority configured on the main AC to 7 (maximum value) . To make sure the priority configured on the main AC is higher than the other standby ACs. The specific configuration is as follows:

```
[Sysname]wlan ap AP1 model WA2620E-AGN
```

```
[Sysname-wlan-ap-ap1]priority level 7
```