

# Switch between the main and standby ACs, the main AC cannot switch bac

Wireless 余煌 2020-12-15 Published

mull

After the main AC failure is restored, the AP and Client are still connected to the standby AC and can not automatically switch back to main AC.

The AP priority configured on the main AC is not 7

Set the AP priority configured on the main AC to 7 (maximum value) . To make sure the priority config ured on the main AC is higher than the other standby ACs. The specific configuration is as follows: [Sysname]wlan ap AP1 model WA2620E-AGN

[Sysname-wlan-ap-ap1]priority level 7