



Telnet login method for MSR20/30/50 series routers

Routers

龚训杰

2020-12-16 Published

Network Topology

For MSR20/30/50

Configuration Steps

Enter the system view and enable the Telnet service, which is enabled by default.

```
<H3C> system
```

```
[H3C] telnet server enable
```

Configure the VTY interface authentication mode to scheme mode (user name + password authentication).

```
[H3C] user-interface vty 0 4
```

```
[H3C-ui-vty0-4] authentication-mode scheme
```

```
[H3C-ui-vty0-4] quit
```

Create a local account admin, the password is admin, and the permission level is Level3.

```
[H3C] local-user admin
```

```
[H3C-luser- admin] password simple admin
```

```
[H3C-luser- admin] service-type telnet
```

```
[H3C-luser- admin] authorization-attribute user-role network-operator
```

```
[H3C-luser- admin] quit
```

Save the configuration.

```
[H3C] save force
```

Key Configuration

```
[H3C] telnet server enable
```

```
[H3C-luser- admin] service-type telnet
```