

## Automatic logout for wireless portal users.

Wireless 龚训杰 2020-12-25 Published

AC=SW=AP

There are 2 ways to let wireless portal users logoff.

- 1. Configure in isp domain view: authorization-attribute idle-cut 1 10240
- 2. Configure the following 2 commands at the same time:

wlan service-template 123

[AC-wlan-st-123]client cache aging-time 0

[AC] portal user-logoff after enable

After automatic logout is enabled for wireless portal users, the device will automatically log out a portal user after the user is disconnected from the wireless network.

[AC-wlan-st-123]client cache aging-time 0

[AC] portal user-logoff after enable