

知 Automatic logout for wireless portal users.

Wireless 龚训杰 2020-12-25 Published

Network Topology

AC=SW=AP

Configuration Steps

There are 2 ways to let wireless portal users logoff.

1. Configure in **isp domain** view: **authorization-attribute idle-cut 1 10240**
2. Configure the following 2 commands at the same time:

```
wlan service-template 123
```

```
[AC-wlan-st-123]client cache aging-time 0
```

```
[AC] portal user-logoff after enable
```

After automatic logout is enabled for wireless portal users, the device will automatically log out a portal user after the user is disconnected from the wireless network.

Key Configuration

```
[AC-wlan-st-123]client cache aging-time 0
```

```
[AC] portal user-logoff after enable
```