

知 部分款型AP从云模式切换至瘦模式的一种方法 (WA4320H-SI/WAP712H/WAP712C-LI) (二) 手动给AP上传瘦模式版本

AP管理 胡甲聪 2021-03-11 发表

组网及说明

下述内容适用于WA4320H-SI/WAP712H/WAP712C-LI款型，以WAP712C-LI为例。

问题描述

WAP712C-LI工作在云模式下，版本为R1113P05-OASIS，上电启动后提示：System has started up.
To manage the device, you can log in to the Oasis platform or lognterface of the device through the management Wi-Fi.

此时，如果需要将云模式切换为瘦模式，可以在设备上电启动时进入bootware界面完成切换。

过程分析

(二) 手动给AP上传瘦模式版本的主要思路:

- 1 在AP上电启动过程中, Ctrl+B进入EXTENDED-BOOTWARE, 之后Ctrl+Y选择AP Mode为Fit Mode.
- 2 Changed to fit mode successfully! Please reboot the system now!表示切换成功, 此时需要继续按<0> Reboot.
- 3 手动给AP上传瘦模式版本.

解决方法

1 切换模式

System is starting...

Press Ctrl+D to access BASIC-BOOTWARE MENU

Booting Normal Extend BootWare

The Extend BootWare is self-decompressing.....

Done!

* *

* H3C WAP712C-LI-OASIS BootWare, Version 7.19 *

* *

Copyright (c) 2004-2019 New H3C Technologies Co., Ltd.

Compiled Date : Dec 23 2019

CPU Type : ATHEROS AR9563

CPU L1 Cache : 32KB

CPU Clock Speed : 775MHz

Memory Type : SDRAM

Memory Size : 128MB

Memory Speed : 560MHz

BootWare Size : 512KB

Flash Size : 16MB

PCB Version : Ver.A

BootWare Validating...

Press Ctrl+B to access EXTENDED-BOOTWARE MENU...

Password recovery capability is enabled.

Note: The current operating device is flash

Enter < Storage Device Operation > to select device.

=====

<1> Boot System |

<2> Enter Serial SubMenu |

<3> Enter Ethernet SubMenu |

<4> BootWare Operation Menu |

<0> Reboot |

=====

Ctrl+Y: Change AP Mode

Enter your choice(0-4):

Please select the new mode

Current mode is Oasis

=====

[NO. Mode |

|1 Oasis Mode |

|2 Fit Mode |

|0 Exit |

=====

Enter your choice(0-2):2

This operation takes several minutes.Please wait...

Something wrong with the file.

Changed to fit mode successfully! Please reboot the system now!

\\已切换至瘦模

式

=====

<1> Boot System |

<2> Enter Serial SubMenu |

<3> Enter Ethernet SubMenu |

<4> BootWare Operation Menu |

<0> Reboot |

=====

Ctrl+Y: Change AP Mode

Enter your choice(0-4): 0

System is starting...

Press Ctrl+D to access BASIC-BOOTWARE MENU

Booting Normal Extend BootWare

The Extend BootWare is self-decompressing.....

Done!
