



## 通过SNMP上传配置文件

SNMP

胡伟

2021-06-15 发表

组网及说明


组网无

## 配置步骤



以下列节点为例

hh3cCfgOperateType (1.3.6.1.4.1.25506.2.4.1.2.4.1.2)	read-create	
hh3cCfgOperateProtocol (1.3.6.1.4.1.25506.2.4.1.2.4.1.3)	read-create	
hh3cCfgOperateFileName (1.3.6.1.4.1.25506.2.4.1.2.4.1.4)	read-create	
hh3cCfgOperateServerAddress (1.3.6.1.4.1.25506.2.4.1.2.4.1.5)	read-create	
hh3cCfgOperateUserName (1.3.6.1.4.1.25506.2.4.1.2.4.1.6)	read-create	
hh3cCfgOperateUserPassword (1.3.6.1.4.1.25506.2.4.1.2.4.1.7)	read-create	
hh3cCfgOperateEndNotificationSwitch (1.3.6.1.4.1.25506.2.4.1.2.4.1.8)	read-create	
hh3cCfgOperateRowStatus (1.3.6.1.4.1.25506.2.4.1.2.4.1.9)	read-create	
hh3cCfgOperateServerPort (1.3.6.1.4.1.25506.2.4.1.2.4.1.10)	read-create	

### 1. 多变量绑定

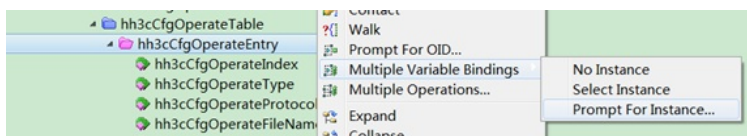

输入任意一个整数值

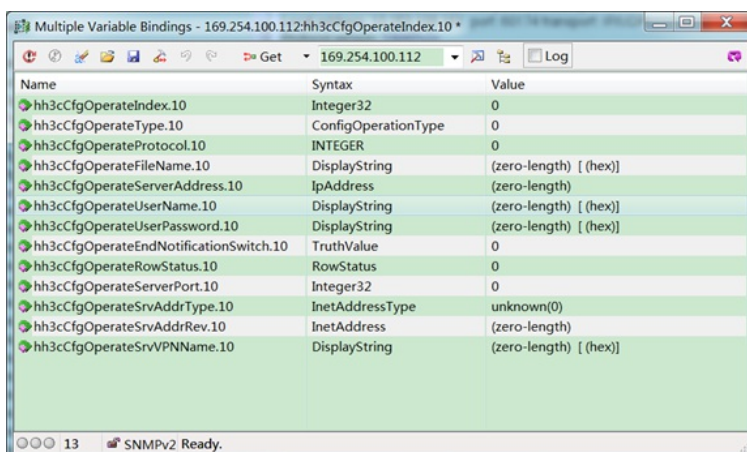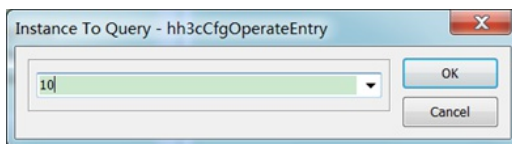

从中选出需要设置的节点，不需要的选中[delete]删除。这里注意一下，索引节点必须去掉，因为之前已经指定过索引了。结果如下：

Multiple Variable Bindings - 169.254.100.112:hh3cCfgOperateType.10

Get 169.254.100.112 Log

Name	Syntax	Value
hh3cCfgOperateType.10	ConfigOperationType	0
hh3cCfgOperateProtocol.10	INTEGER	0
hh3cCfgOperateFileName.10	DisplayString	(zero-length) [(hex)]
hh3cCfgOperateServerAddress.10	IpAddress	(zero-length)
hh3cCfgOperateUserName.10	DisplayString	(zero-length) [(hex)]