



## ICG3000F-DP 接口直连无法ping通

王丽娟 2017-04-27 发表

配置完接口地址之后，默认不通，需要把接口加入安全域，放通域间策略即可。R04XX以后的版本有此情况（可参考我司V7的防火墙）例：  
security-zone intra-zone default permit acl basic 2000 rule permit security-zone name Trust import interface GigabitEthernet 0/0 import interface GigabitEthernet 0/1 quit zone-pair security source Any destination Any packet-filter 2000