

配置步骤

V7交换机Console密码忘记处理方法

目录

V7交换机Console密码忘记处理方法

1 配置需求或说明

1.1 适用产品系列

1.2 配置需求及实现的效果

2 组网图

3 配置步骤

3.1 进入bootroom菜单清除Console密码

3.2 如果不需要之前的配置信息的话

3.3 如果需要之前的配置信息的话

1 配置需求或说明

1.1 适用产品系列

本案例适用于如 本案例适用于如S5024PV3-EI-HPWR、S5048PV3-EI、S5120V2-52P-LI、S5120V2-28P-SI、S5130-52S-EI、S5130S-28S-EI、S5150X-16ST-EI等S5000PV3、S5120V2、S5130、S5150系列等的V7交换机，V5、V7交换机具体分类及型号可以参考“1.1 Comware V5、V7平台交换机分类说明”。

1.2 配置需求及实现的效果

清除Console密码，恢复出厂

2 组网图

无

3 配置步骤

3.1 进入bootroom菜单清除Console密码

通过conlse线和crt软件连接并登陆设备，然后把设备断电重启。控制台上会打印如下信息，当出现“press Ctrl+B”的时候快速按住“Ctrl+B” 进入botroom菜单

```
System is starting...
Press Ctrl+D to access BASIC-BOOTWARE MENU
Booting Normal Extend BootWare
The Extend BootWare is self-decompressing.....Done!
BootWare Validating...
Press Ctrl+B to enter extended boot menu...
BotWare password: Not required. Please press Enter to continue.
Password recovery capability is enabled.
Note: The current operating device is flash
Enter < Storage Device Operation > to select device.
```

按住“Ctrl+B”进入如下菜单。选择“<6> Skip Current System Configuration”跳过当前配置启动,不同设备可能不是数字6,

```
=====EXTEND-BOOTWARE MENU=====
===
|<1> Boot System |
|<2> Enter Serial SubMenu |
|<3> Enter Ethernet SubMenu |
|<4> File Control |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration |
|<7> BootWare Operation Menu |
|<8> Clear Super Password |
|<9> Storage Device Operation |
|<0> Reboot |
=====
```

```
Ctrl+Z: Access EXTEND-ASSISTANT MENU
Ctrl+F: Format File System
Enter your choice(0-9): 6
Flag Set Success.
然后输入0重启设备
```

===== <EXTEND-BOOTWARE MENU> =====

===

- |<1> Boot System |
- |<2> Enter Serial SubMenu |
- |<3> Enter Ethernet SubMenu |
- |<4> File Control |
- |<5> Restore to Factory Default Configuration |