

配置步骤

Gen8系列服务器			
DL160 Gen8 DL320e Gen8 DL320e Gen8 v2 DL360e Gen8 DL360p Gen8	DL380e Gen8 DL388e Gen8 DL380p Gen8 DL388p Gen8 DL385p Gen8	DL560 Gen8 DL580 Gen8	ML10 v2 Microserver Gen8 ML310e Gen8 ML310e Gen8 v2 ML350e Gen8 ML350e Gen8 v2 ML350p Gen8
Gen9系列服务器			
DL20 Gen9 DL60 Gen9 DL80 Gen9	DL120 Gen9 DL160 Gen9 DL180 Gen9	DL360 Gen9 DL380 Gen9 DL560 Gen9 DL580 Gen9	ML10 Gen9 ML30 Gen9 ML110 Gen9 ML150 Gen9 ML350 Gen9
Gen10系列服务器			
DL20 Gen10	DL360 Gen10 DL380 Gen10 DL560 Gen10 DL580 Gen10	DL325 Gen10 DL385 Gen10	ML30 Gen10 ML110 Gen10 ML350 Gen10
Gen10 Plus系列服务器			
DL20 Gen10 Plus DL110 Gen10 Plus	DL360 Gen10 Plus DL380 Gen10 Plus	DL325 Gen10 Plus DL325 Gen10 Plus v2 DL345 Gen10 Plus DL365 Gen10 Plus DL385 Gen10 Plus DL385 Gen10 Plus v2	ML30 Gen10 Plus
Gen11系列服务器			
DL320 Gen11 DL360 Gen11 DL380 Gen11 DL380a Gen11	DL325 Gen11 DL345 Gen11 DL365 Gen11 DL385 Gen11	DL560 Gen11	ML110 Gen11 ML350 Gen11

想要了解更多请访问: [服务器运维指南](#)

