



【MVS】F5负载均衡器初始化——空配置启动

设备管理

胡伟 2023-06-19 发表

问题描述

【MVS】F5负载均衡器初始化——空配置启动

解决方法

没有任何配置的新系统第一次运行的时候，设备会自动进入初始化向导。

The screenshot displays the FS web management interface. At the top, a status bar shows system information: Hostname: bgs1, P Address: 10.0.10.143, Date: Apr 1, 2012, Time: 8:00 AM (PDT), User: admin, Role: Administrator, Partition: Common, and a Log out button. Below this, a message states "No license exists for this device". The main interface features a navigation menu with "Main", "Help", and "About" options. The "Setup Utility" section is expanded, showing a list of configuration options: Introduction, License, Resource Provisioning, Platform, Network, Redundancy, VLANs, Config Sync, Failover, Mirroring, Active/Standby Pair, and Discover Peer. The "Introduction" option is selected, displaying a "Welcome" message: "Setup Utility. To begin configuring this BIC-IP® system, please complete the Setup Utility. To begin, click the 'Next' button." A "Next" button is visible at the bottom of the message box.

