

知 交换机怎么看端口down的原因

以太网接口 Sakuray 2023-06-21 发表

问题描述

交换机用什么命令能看设备上端口down的原因

解决方法

可以用display interface brief down命令查看，如：

```
<Sysname> display interface brief down
```

Brief information on interfaces in route mode:

Link: ADM - administratively down; Stby - standby

Interface	Link Cause
Vlan2	DOWN Not connected

Brief information on interfaces in bridge mode:

Link: ADM - administratively down; Stby - standby

Interface	Link Cause
GE1/0/2	DOWN Not connected

