

问题描述

交换机查看桥mac的三种方法
桥MAC的查看方式：在Probe视图执行debugging system bridgemac read命令，查看BridgeMac字段。
例如，下面设备的桥MAC地址为542b-de0c-0200。
[Sysname-probe] debugging system bridgemac read

The Bridge Macs are as follows:
542b-de0c-0200
Total reserved mac number: 256
SNID:23a6-db6c-d829-a93d
BridgeMac:542b-de0c-0200 BaseInfMac:542b-de0c-0200 INTFMac:542b-de0c-0201

```
# 显示IRF中所有成员设备的相关信息。
<Sysname> display irf
MemberID  Slot  Role   Priority  CPU-Mac          Description
-----
*+1        0      Master 1      0210-fc03-0007  -----

* indicates the device is the master.
+ indicates the device through which the user logs in.

The Bridge MAC of the IRF is: 3ce5-a6b8-3800
Auto upgrade           : yes
Mac persistent         : always
Domain ID              : 0
Auto merge             : no
```

表1-1 display irf命令显示信息描述表

桥MAC的查看方式：在Probe视图执行debug sysm bridgemac read命令，查看BridgeMac字段。例如，下面设备的桥MAC地址为542b-de0c-0200。
[Sysname-probe]debug sysm bridgemac read

The Bridge Macs are as follows:
542b-de0c-0200
Total reserved mac number: 256
SNID:23a6-db6c-d829-a93d
BridgeMac:542b-de0c-0200 BaseInfMac:542b-de0c-0200 INTFMac:542b-de0c-0201

分布式网关VSI接口MAC高36位要与base-mac一致，低12位没要求。建议分布式网关VSI接口MAC和EVPN的全局MAC地址（evpn global-mac）配置一致。

解决方法

如截图