


组网及说明

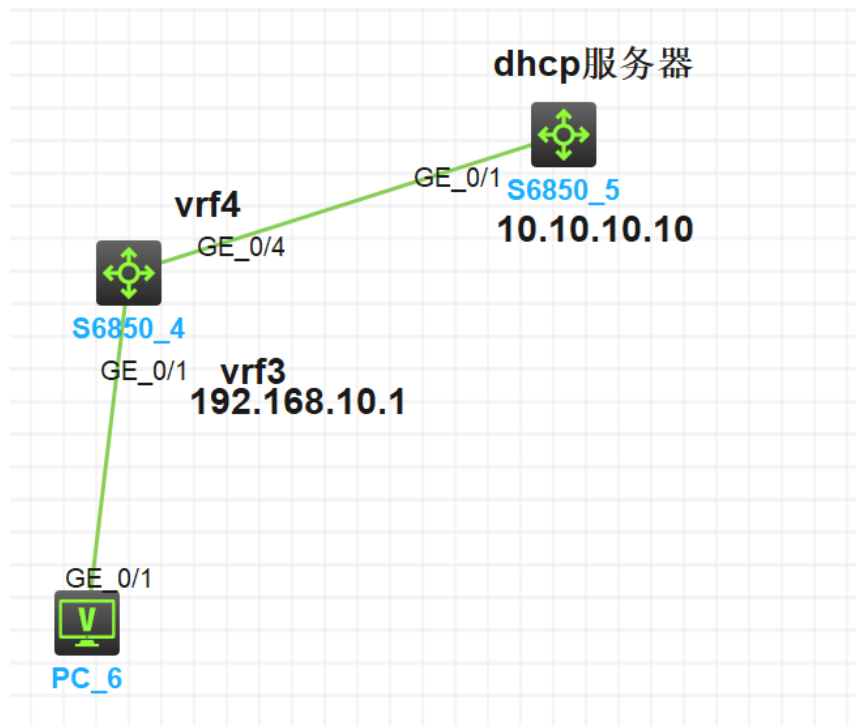

配置步骤

通过路由复制分别在vrf3和vrf4中引入对方的直连路由

```
ip vpn-instance vrf3
#
address-family ipv4
route-replicate from vpn-instance vrf4 protocol direct
#
ip vpn-instance vrf4
#
address-family ipv4
route-replicate from vpn-instance vrf3 protocol direct
```

dhcp中继配置

```
interface Vlan-interface10
ip binding vpn-instance vrf3
ip address 192.168.10.1 255.255.255.0
dhcp select relay
dhcp relay server-address 10.10.10.10 vpn-instance vrf4
#
interface Vlan-interface20
ip binding vpn-instance vrf4
ip address 10.10.10.9 255.255.255.0
```

接口放通vlan 配置没有写出来。服务器配置路由到中继交换机以及配置地址池。

配置关键点

```
dhcp relay server-address 10.10.10.10 vpn-instance vrf4
```

接口	状态	IPv4地址	IPv6地址
G0/0/1	UP	192.168.10.2/24	

接口管理
 禁用 启用

IPv4配置:
 DHCP
 静态