HPE Virtual Connect Fibre Channel 典型配置 - 连接SAN Switch动态负载均衡FC链路配置

Virtual Connect 多链路 杜玉坤 2017-12-18 发表

本文介绍HPE VC-FC模块(Virtual Connect Fibre Channel Module)通过多端口连接SAN Switch实现动态负载均衡。

VC-FC模块上联SAN Switch,需要在SAN Switch对应端口开启NPIV功能。

物理连接示意图



登录到VC管理界面(VCM),如果VC Domain没有创建过,会有创建VC Domain向导,按照向导操作创建好VC Domain。

1. 创建名称为"Fabric-1"的SAN Fabric。

a. 在VCM界面依次选择Define, SAN Fabric进入创建SAN网络界面。

b. 填写Fabric网络名称"Fabric-1"。

c. 在"Enclosure Uplink Ports"区域添加上联端口,选择Bay 5, Port 1, Port 2, Port 3, Port4 (这里B ay5的VC-FC模块对应插在刀片服务器中Mezz2槽位的HBA卡Port 1)。

d. 点击Apply创建第一个SAN Fabric完成。

Fabric								
Fabric Name			Fabric Ty	уре	Login Re-Distributio	Configured Speed		
Fabric-1			FabricAtt	ach	- MANUAL		Auto	•
Enclosur	e Uplink Po	orts						
Uplink Port	Enclosure	Bay	Port	Status	Connected To	Action		
Uplink Port 1	c7000-1	5	0	4 Gb	10:00:00:05:1E:5B:2C:1	4 Delete		
Uplink Port 2	c7000-1	5	0	4 Gb	10:00:00:05:1E:5B:2C:1	4 Delete		
Uplink Port 3	c7000-1	5	0	4 Gb	10:00:00:05:1E:5B:2C:1	4 <u>Delete</u>		
Uplink Port 4	c7000-1	5	0	4 Gb	10:00:00:05:1E:5B:2C:1	4 <u>Delete</u>		
Add Port								
		1						

2. 同样的步骤创建名称为"Fabric-2"的SAN Fabric,端口使用Bay 6,Port 1,Port 2,Port 3,Port 4(Bay6的VC-FC模块对应插在刀片服务器中Mezz2槽位的HBA卡Port 2)。

Fabric								
Fabric Name		Fabric Ty		Login Re-Distribution	Login Re-Distribution			
Fabric-2		abricAtt	ach	- MANUAL	Auto			
Enclosur	e Uplink Po	orts						
Uplink Port	Enclosure	Bay	Port	Status	Connected To	Action		
Uplink Port 1	c7000-1	6	0	4 Gb	10:00:00:05:1E:5B:DC:82	2 Delete		
Uplink Port 2	c7000-1	6	0	4 Gb	10:00:00:05:1E:5B:DC:82	Delete		
Uplink Port 3	c7000-1	6	0	4 Gb	10:00:00:05:1E:5B:DC:82	<u>Delete</u>		
Uplink Port 4	c7000-1	6	0	4 Gb	10:00:00:05:1E:5B:DC:82	<u>Delete</u>		
Add Port								
		1						

- 3. 根据网络规划配置以太网络,可以参考<u>《Virtual Connect典型配置》</u>中以太网典型配置。
- 4. 创建Server Profile, 配置HBA卡与SAN Fabric的对应关系。
- a. 在VCM界面依次选择Define, Server Profile
- b. 填写Profile Name,并根据网络规划配置好以太网链路。
- c. 在"FC HBA Connections"区域Port 1的"FC SAN Name"下拉菜单中选择"Fabric-1"。
- d. 在"FC HBA Connections"区域Port 2的"FC SAN Name"下拉菜单中选择"Fabric-2"。

Port Connected To FC SAN Neme Status Port Speed Type vW/PN 1 Bay 5 Fabric-1 Ø AUTO FACTORY-DEFAULT	1	FC HBA Connections									
1 Bay5 Fabric-1 O AUTO FACTORY-DEFAULT	Action	WWARN	Port Speed Type	Status	FC SAN Name	Connected To	Port				
		FACTORY-DEFAULT	AUTO	0	Fabric-1	Bay 5	1				
2 Bay 6 Fabric-2 O AUTO FACTORY-DEFAULT	Delet	FACTORY-DEFAULT	AUTO	0	Fabric-2	Bay 6	2				

f. 确认刀片为关机状态,在"Assign Profile to Server Bay"区域,Server下拉菜单中选择相应刀片,然后点击Apply,创建完成。

VC-FC模块无法独立配置,必须由VC Eth模块创建VC Domain后管理使用。

SAN Fabric流量不能跨VC模块,仅可以由HBA卡通过固定的Port Mapping到达对应的VC-FC模块,再 传出到达外部SAN Switch,同一个VC-FC模块4个上联端口可以同时提供给全部刀片FC链路使用,但 从一个HBA卡的一个端口发起的FC链路同时只能从其中一个上联端口login到SAN Switch,如果刀箱中 插满16台刀片,那么16个HBA的Port 1平均分配到IC Bay5 VC-FC模块4个上联端口,端口映射关系为 4:1,同理16个HBA的Port 2平均分配到IC Bay6 VC-FC模块4个上联端口。

当其中一个端口链路断开时,断开端口的流量会重新分配到同一VC-FC模块其余3个端口,实现冗余。 对于VC-FC模块Login Re-Distribution为默认Manual,不支持Automatic Login Re-Distribution,保证F C链路的连续通信特性,避免因端口故障引起的连接抖动问题。也就是当端口断开再恢复连接之后,数 据流量不会主动切换回原端口,如果需要重新达到端口流量平衡,需要手动Re-Distribution。

🔲 Status	SAN Fabric	Туре	Login Re-Distribution Port Status				Connected To	Enclosure	Bay	Port	Action
0	Fabric-1	FabricAttach	MANUAL	0	LOGGED-IN	16 Gb	51:08:05:F3:00:11:5C:01	Enclosure1	5	1	Edit 👻
				٢	LOGGED-IN	16 Gb	51:08:05:F3:00:11:5C:01	Enclosure1	5 1	Dele Dele	te
				0	LOGGED-IN	16 Gb	51:08:05:F3:00:11:5C:01	Enclosure1	5	ReDi	istribute
				٢	LOGGED-IN	16 Gb	51:08:05:F3:00:11:5C:01	Enclosure1	5	4	