

配置步骤

1. 设置NTP PRIMARY Server

```
SET NTP PRIMARY 10.12.173.120
```

2. 设置NTP SECONDARY Server

```
SET NTP SECONDARY 10.12.181.2
```

3. 开始NTP同步

```
ENABLE NTP
```

4. 设置NTP同步周期(以秒为单位)

```
SET NTP POLL 86400
```

5. 设置时区

```
SET TIMEZONE Asia/Shanghai
```

Poll time should be between 60 and 86,400 seconds.