固件升级 夏士林 2018-01-02 发表

Gen10 首次进入Intelligent Provisioning (IP) 初始化向导操作步骤。

1. 服务器开机后,按"F10"键,选择Intelligent Provisioning (以下简称IP)。



3. 在这里,可以根据配置需求,进行界面语言(Interface Language)、键盘语言(Keyboard Lang uage)、时区(Time Zone)、bios引导模式(Boot Bios Mode)设置,然后选择"NEXT"。

iLO Integrated Remote Console - Serv	er: ProLiant DL560 Gen10 iLO: ILO6CU7469D1S.huawei-3coĦ.com — 🗌
ower Switch Virtual Drives Reyboard	нер
Hewlett Packard ProLiant DL56	0 Gen10 🛛 🖓 ? i
Enterprise	
Select your language and timezone	
Interface Language:"	
English (US)	•
Keyboard Language: "	
English (US)	•
Time Tons 1	
UTC+0800 Tainai Bailing Changeing Mang K	sea Unimal
o re-oaco, rape, sejing, chongqing, nong ku	ng, orump
Boot Bios Mode	
UEFI Optimized Boot	· · ·
	NEXT
04 y 769	
我们安安受财议,才可以继	头,马远按文,远择 NEXT 。
iLO Integrated Remote Console - Serv	er: ProLiant DL560 Gen10 iLO: 📃 🗌 🗌 🗌 🗌 🗌 🗌
wer Switch Virtual Drives Keyboard	Help
Hewlett Packard Proliant DL 54	0 Gen10
Enterprise	
Devel Citta	
Read EULA	
1. Applicability. This end user license agreement (ersion The "Agreement") governs the use of accompanying software, unless it is subject to a separate agreement between
you and Hewlett Packard Enterprise Company an provides translations of this Agreement in certai	d its subsidiaries ("HPE"). By downloading, copying, or using the software you agree to this Agreement. HPE n languages other than English, which may be found at: http://www.hpe.com/software/SWLicensing.
2. Terms. This Agreement includes supporting m	aterial accompanying the software or referenced by HPE, which may be software license information, additional
license authorizations, software specifications, p Additional license authorizations are at: http://wv	ublished warranties, supplier terms, open source software licenses and similar content ("Supporting Material"). w/hpe.com/software/SWLicensing.
3. Authorization. If you agree to this Agreement of	n behalf of another person or entity, you warrant you have authority to do so.
4. Consumer Rights. If you obtained software as a	consumer, nothing in this Agreement affects your statutory rights.
5. Electronic Delivery. HPE may elect to deliver so	ftware and related software product or license information by electronic transmission or download.
 b. Electrice Grant, il you ablue by this Agreement, i accompanying coffware for your internal purpor 	The grants you a non-exclusive non-inansier able license to use one copy of the version of release of the ac only and is subject to shy energific software licension information that is in the software product or its
Accept Intelligent Provisioning EULA	
	PREVIOUS NEXT
	PREVIOUS
	PREVIOUS

5. 自动优化配置页面按照默认选择即可,选择"NEXT"。

neo integra	Virtual Driver	Keyboard	Help						
k k	vintual Drives	Reyboard	neip			(22)			
Hewlett Pa Enterprise	ackard ProL	iant DL56.	0 Gen10	***	1 4 4 ⁴ 1		Ø	?	i
Automa	tically optimize your s	erver							
What will thi	is server be used for?								
General V	Workloads							•	
••• •	Enable F10 functionalit	y - we recommend	you leave this active						
	Enable automatic applic	ation of software	and firmware update	s to this system					
			PREVIOU	5	NEXT				
						 	<u> </u>		
^{24 x 768} 网络配	置页面按照	默认选择图	即可,选择'	MÍ NEXT"。	11 • •	 	â A	ES	•
24 x 768 网络配 iLO Integra	置页面按照 ated Remote Cc	默认选择图	即可,选择 [。] er: ProLiant DL5	*NEXT"。	II ILO:		â A —	ES	•
4 x 768 网络配 iLO Integra ver Switch	置页面按照 ated Remote Cc Virtual Drives	默认选择的 insole - Servi Keyboard	即可,选择 [。] er: ProLiant DL! Help	M NEXT"。	₩ ▶ ●		≩ A	ES	
4 x 768 网络配 iLO Integra ver Switch tewlett Pa Enterprise	置页面按照 ated Remote Cc Virtual Drives ackard ProL	默认选择的 insole - Servi Keyboard .iant DL56	即可,选择 er: ProLiant DLS Help 0 Gen10	*NEXT"。	11 k 0:		€ €	ES	·
4 x 768 网络配 iLO Integra rer Switch Hewlett Pa Enterprise	置页面按照 ated Remote Cc Virtual Drives ackard ProL	默认选择的 onsole - Serve Keyboard .iant DL56	即可,选择 [。] er: ProLiant DL5 Help O Gen10	10 Gen10	ii ▶ ●		 ▲ A – 	ES	•
4 x 768 网络配 iLO Integra er Switch Hewlett Pa Enterprise	置页面按照 ated Remote Cc Virtual Drives ackard ProL	默认选择的 insole - Serv Keyboard iant DL56	即可,选择 [。] er: ProLiant DL5 Help O Gen10	W NEXT"。 560 Gen10	11 k 0		à A 	es	i
4 x 768 网络配 iLO Integra ver Switch Hewlett Pa Enterprise	置页面按照 ated Remote Co Virtual Drives ackard ProL kSettings	默认选择的 insole - Servi Keyboard	即可,选择 [。] er: ProLiant DL5 Help O Gen1O	100 Gen10	II P O		- -	ES	•
4 x 768 网络配 iLO Integra ver Switch Hewlett P& Enterprise	置页面按照 ated Remote Cc Virtual Drives ackard ProL k Settings c Settings	默认选择 Insole - Serve Keyboard .iant DL56	即可,选择 [。] er: ProLiant DL ^g Help O Gen10	1900 (1900) 1900 (1900) 1900 (1900) 1900 (1900) 1900 (1900)	II DO		2 A	es 	i
4 x 768 网络配 iLO Integra ver Switch Hewlett P2 Enterprise	置页面按照 ated Remote Cc Virtual Drives ackard ProL k Settings k Settings	默认选择的 nsole - Servr Keyboard .iant DL56	即可,选择 [。] er: ProLiant DL ⁵ Help O Gen10	100 Gen10	II DO		2 A	es	i
4 x 768 网络配 iLO Integra ver Switch Hewlett P2 Enterprise	置页面按照 ated Remote Cc Virtual Drives ackard ProL k Settings k Settings se Prox	默认选择的 nsole - Serv Keyboard .iant DL56 HCP Aute-Config es and hstats	即可,选择 ^s er: ProLiant DL5 Help O Gen10	(NEXT". 360 Gen10	11 LO:		A 🔒	es 	1
4 x 768 网络配 iLO Integra ver Switch * Hewlett Pce Enterprise Network Network	置页面按照 ated Remote Cc Virtual Drives ackard ProL sckard ProL sceProx C D be Proy C D be P	默认选择的 insole - Servi Keyboard .lant DL56	即可,选择 [。] er: ProLiant DLS Help O Gen10	(NEXT") 660 Gen10	II P 0		A 😭	es 	i
4 x 768 网络配 iLO Integra ver Switch Hereter Pa Enterprise	置页面按照 ated Remote Co Virtual Drives ackard ProL k Settings k Settings se Settings Jse Proxy ● D atwork interface for update ac avork Settings:	默认选择的 insole - Servi Keyboard .iant DL56 HCP Auto-Config es and http: ito-Configuration	即可,选择 [。] er: ProLiant DL ¹ Help O Gen1O	100 Gen10	ILO:		 A C 	es 	i
4 x 768 网络配 iLO Integra ver Switch Henterprise Network Network	置页面按照 ated Remote Cc Virtual Drives ackard ProL k Settings c Settings dse Prox の の の の dse Frox の の の dse Frox の の の の dse Frox の の の の dse Frox の の の の の dse Frox の の の の の dse Frox の の の の の の の	默认选择的 nsole - Server Keyboard .iant DL56 HCP Auto-Configuration	即可,选择 [。] er: ProLiant DL ⁵ Help O Gen1O	19 (NEXT") 560 Gen10	ilO:		 ▲ ▲ ▲ <li< td=""><td>es </td><td>•••</td></li<>	es 	•••
A4 x 768 网络配 iLO Integra ver Switch Hewlett P2 Heterprise	置页面按照 ated Remote Cc Virtual Drives ackard ProL Ackard ProL Ackard ProL Jae Prox ① D Jae Prox ② D Jae Prox ② D Jae Prox ③ D Jae Prox ④ D Jae Prox ⑤ D Jae Prox ⑧ D Jae Prox ⑨ D Jae Prox ♡ D Jae Prox	默认选择的 nsole - Serv. Keyboard .iant DL56 HCP Auto-Configuration es and hstafs	即可,选择 [。] er: ProLiant DL5 Help O Gen10	100 Gen10	ILO:		 ▲ ▲ – ● 	es 	i
A4 x 768 网络配 iLO Integra ver Switch Hewlett P2 Hewlett P2 Hewlett P2 Choise ne Automat LO Network LO Network LO Network LO Network	出置页面按照 ated Remote Cc Virtual Drives ackard ProL Ackard ProL See Proy ・ ロー ロ See Proy ・ ロー ロ See Proy ・ ロー ロ See Proy ・ ロー ロ Dr ロー ロー ロー ロー Ackard Carlings Dr ロー ロー ロー Carlings	默认选择的 nsole - Serv. Keyboard .iant DL56 HCP Aute-Config es and hotals .to-Configuration	即可,选择 [•] er: ProLiant DL5 Help O Gen10	100 Gen10	ILO:		A 😭	es 	i
44 x 768 网络配 iLO Integra ver Switch Hewlott P2 Enterprise Network	置页面按照 ated Remote Cc Virtual Drives ackard ProL k Settings x Settings See Prox ・ D Jse Prox ・ D Jse Prox x Settings See Prox ・ D Dremote K Settings Dremote K Settings Dremote K Settings Dremote K Settings Dremote K Settings Dremote K Settings	默认选择的 nsole - Serv Keyboard .iant DL56 HCP Auto-Configuration sead bistals	即可,选择 ^s er: ProLiant DL5 Help O Gen10	NEXT". 360 Gen10	ILO:		A 😭	es 	i

KK II 🕨 🍳

🔒 AES 🛛 🔵 🕲

7. 出现确认窗口,点击"YES"。

1024 x 768

I Contempted Remote Concella - Service Prolifect Di	560 Gen10 131 Oct	- D ¥
ILO Integrated Remote Console - Server: ProLlant DL	1200 Gen 10 120: 1	
Swer Switch Virtual Drives Reyboard Help		
Hewlett Packard ProLiant DL560 Gen10 Enterprise		0 ? i
Network Settings		
Use Proxy OHCP Auto-Configuration		
Choose network interface for updates and installs		
Automatic ? Con	firm	•
ILO Network Settings:	? You will go through and save all settings.	
Off CHCP Auto-Configuration	CANCEL YES	
System Software Update		
Update From HPE Website		
	US NEXT	
		₩
24 x 768	K4 II 🕨 🔍	🔒 AES 🌒 🔮 🕲

8. 完成IP的初始化设置向导后,选择"EXPRESS OS INSTALL"可以进行操作系统的安装,选择"PE RFORM MAINTENANCE"可以对iLO、阵列等进行配置。

LO Integrated Remote Consc	ole - Server: ProLiant DL560 Gen10	iLO:		- 🗆 ×
Power Switch Virtual Drives Ke	eyboard Help			
Hewlett Packard ProLiar Enterprise	nt DL560 Gen10	•	* 7	i U
	Intelligent P World's most advanced serv	Provisioning		
	EXPRESSIOS INSTALL	PERFORM MAINTENANCE		
1024 x 768	₩		á	🔒 AES 🔹 🔿 🌚