

如何使用 HPE RESTful Interface Tool 更改服务器的BIOS配置


BIOS 杜玉坤 2018-03-03 发表

Gen9之后的HPE服务器可以通过RESTful interface工具在线更改BIOS设置，但大部分选项更改后需要重启服务器才能生效。

RESTful工具下载地址：


<http://www.hpe.com/info/resttool>

下载安装后，在[开始]菜单-[程序]-[Hewlett Packard Enterprise]-[RESTful Interface Tool]中运行[RESTful Interface Tool]

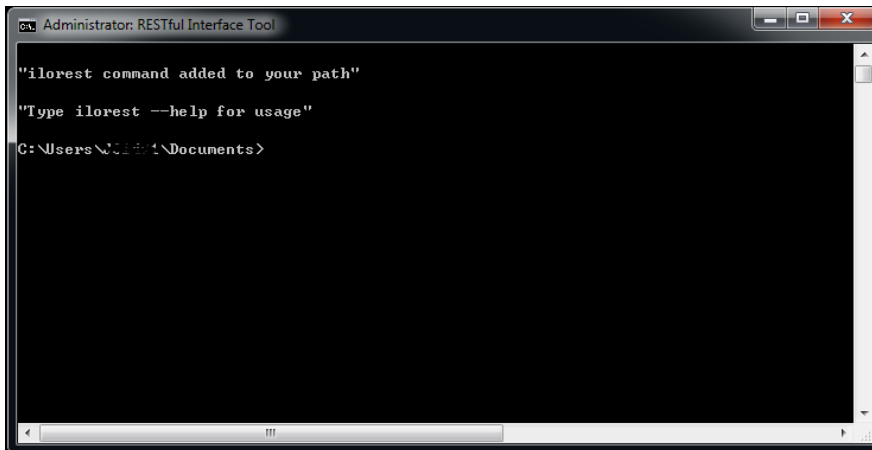


1. 通过交互模式更改目标服务器BIOS配置

a. 执行ilorest

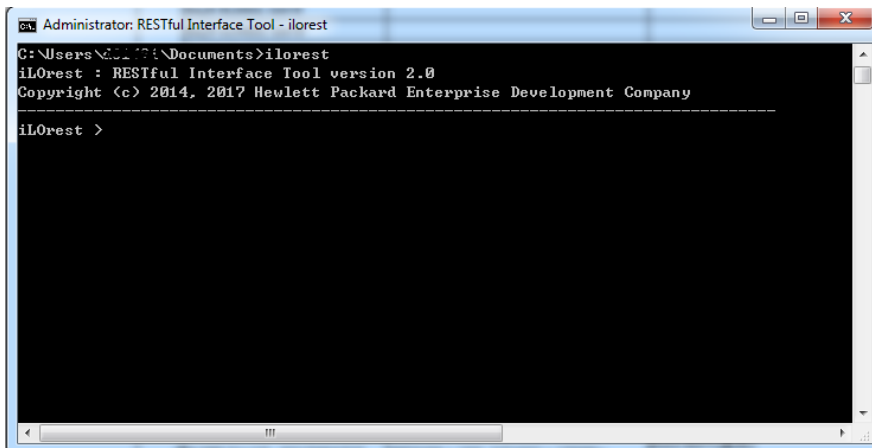

b. 登录目标服务器iLO，命令格式为：login <iLO_IP> -u <iLO_User> -p <iLO_Password>

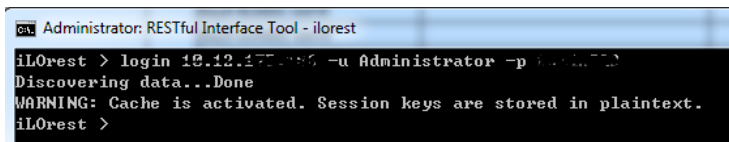

c. 选择目标类型，命令格式为：select <object>

```
ilOrest > select Bios.v1_0_0
```

d. 查看BIOS相关选项，例如：查看CollabPowerControl当前设置

```
ilOrest > get CollabPowerControl  
CollabPowerControl=Enabled
```

e. 修改CollabPowerControl为Disabled

```
ilOrest > set CollabPowerControl=Disabled
```

f. 检查当前更改过的选项

```
ilOrest > status  
Current changes found:  
#Bios.v1_0_0.Bios  
Attributes/CollabPowerControl=Disabled
```

e. 确认并保存更改

```
iloRest > commit
Committing changes...
The operation completed successfully.
Logging session out.
iloRest >
```

2. 通过一条完整命令更改目标服务器某一项BIOS配置

命令格式为: iloRest set <Key>=<Value> --url=<iLO_IP> -u <iLO_User> -p <iLO_Password> --selector=<types> --commit

```
C:\Users\N...> iloRest set CollabPowerControl-Disabled --url=19.10.10.155 -u Administrator -p Administrator --selector=Bios.v1_0_0 --commit
iloRest : RESTful Interface Tool version 2.0
Copyright (c) 2014, 2017 Hewlett Packard Enterprise Development Company

Discovering data...Done
WARNING: Cache is activated. Session keys are stored in plaintext.
Committing changes...
The operation completed successfully.
Logging session out.
```