



S125X查看实时单板功耗的命令是什么？

其他硬件相关

张晓雨

2018-03-12 发表

Q: S125X查看单板实时功耗的命令是什么？

A: [HPE.S12516-X.F-SERIES-probe]display power-info

[RACK1-LEAF-probe]display power-info

Device Power: 1400 Watts

Fan Power: 43 Watts

Surplus power: 890 Watts

Slot No. Power(Watts)

0 63

1 63 --Reserved for standby MPU.

2 149

4 43

5 149

Board Exist Reg0: 0xbf Reg1: 0xf2

Power up Reg0: 0xda Reg1: 0xda ; PowerID Reg: 0x3c

Power Event Information:

Fan stop running,2015/5/24 8:59:49.

Fan stop running,2015/5/24 9:34:0.

Fan stop running,2015/5/24 10:26:32.

Fan stop running,2015/5/24 11:18:24.

Fan stop running,2015/5/24 11:52:29.

Fan stop running,2015/5/24 12:28:6.

Fan stop running,2015/5/24 13:4:0.

Fan stop running,2015/5/24 13:56:54.

Fan stop running,2015/5/24 14:43:36.

Fan stop running,2015/5/24 16:32:30.

Power 2 Insert,2016/12/28 17:34:22.

Power 2 Remove,2016/12/28 17:36:55.

Power 2 Insert,2016/12/28 17:37:40.

Power 2 change to normal,2016/12/28 17:39:10.

Power 1 change to error,2016/12/28 17:59:17.

Power 1 change to normal,2016/12/29 10:18:44.

Power 2 change to error,2016/12/29 10:18:53.

Power 2 Remove,2016/12/29 10:19:20.

Fan stop running,2015/5/24 7:51:59.

Fan stop running,2015/5/24 8:25:46.

POE Power Chassis: Absent