

知 HPE Dynamic Smart Array B140i Controller不支持legacy BIOS mode的显示界面

张一明 2018-04-01 发表

Q:HPE Dynamic Smart Array B140i Controller不支持legacy BIOS mode的显示界面?

A:启动的时候服务器会报292的提示, 并告知legacy BIOS mode不支持B140i的SW RAID Mode。建议将启动模式更改为UEFI Mode才可以支持HPE SW RAID。

```
Serial Number: 6CU812E7U0
System Node ID: 2

System Memory: 128 GB
2 Processor(s) detected, 24 total cores enabled, Hyperthreading is enabled
Proc 1: Intel(R) Xeon(R) CPU E5-2650 v4 @ 2.20GHz
Proc 2: Intel(R) Xeon(R) CPU E5-2650 v4 @ 2.20GHz
QPI Speed: 9.6 GT/s

HPE Power Profile Mode: Balanced Power and Performance
Power Regulator Mode: Dynamic Power Savings
Advanced Memory Protection Mode: Advanced ECC Support
Inlet Ambient Temperature: 22°C / 71°F
Boot Mode: Legacy BIOS

Redundant ROM Detected - This system contains a valid backup system ROM
HPE SmartMemory authenticated in all populated DIMM slots.

292 - Invalid HPE Software RAID Configuration. HPE B140i SW RAID Mode is NOT
supported when the Boot Mode is configured for legacy BIOS Mode.
Action: Configure the Boot Mode to UEFI Mode if using HPE SW RAID.

Starting drivers. Please wait, this may take a few moments...

iLO 4 IPv4: 192.168.10.23
iLO 4 IPv6: Unknown

[F9] System Utilities [F10] Intelligent Provisioning [F11] Boot Menu [F12] Network Boot
```