

知 SR6600路由器如何降级备区bootware经验案例

软件升级 李长剑 2014-10-21 发表

一、 组网:

无

二、 问题描述:

SR6600路由器设备版本已经降级成功后, 每次重启总会打印Backup Extend BootWare is newer than Normal Extend BootWare,Update?

三、 过程分析:

SR66路由器主区(normal)bootware降级成功, 备区(backup)bootware不会主动降级, 该提示不影响设备运行, 可以不用关注。如果需要降级的话, 可以通过bootware菜单主动降级备区

(backup) bootware

四、 解决方法:

系统上电启动是按ctrl+B热键进入下面bootware菜单, 按照下面操作执行, 降级备区(backup)bootware版本。

```
=====
|<1> Boot System |
|<2> Enter Serial SubMenu |
|<3> Enter Ethernet SubMenu |
|<4> File Control |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration |
|<7> BootWare Operation Menu |
|<8> Clear Super Password |
|<9> Storage Device Operation |
|<0> Reboot |
=====
Ctrl+Z: Access EXTEND-ASSISTANT MENU

Ctrl+F: Format File System
Ctrl+C: Display Copyright
Enter your choice(0-9): 7

=====
|Note:the operating device is flash |
|<1> Backup Full BootWare |
|<2> Restore Full BootWare |
|<3> Update BootWare By Serial |
|<4> Update BootWare By Ethernet |
|<0> Exit To Main Menu |
=====
Enter your choice(0-4): 1
Will you backup the Basic BootWare? [Y/N]Y
Begin to backup the Basic BootWare...Done!
Will you backup the Extend BootWare? [Y/N]Y
Begin to backup the Extend BootWare...Done!
```