


一、组网需求:

SR66SR66-X系列路由器部分设备V7版本已经陆续发布, 其中SR6600系列路由器需要更换支持V7平台的RPE-X3主控以及BKEC扩展板, 而SR6602-X以及SR66-X路由器可以平滑升级至V7版本不需要更换硬件, 但是需要单独将V5 Bootware升级到V7 Bootware。下面为大家介绍一下SR66系列路由器V5升级V7步骤。

二、组网图:

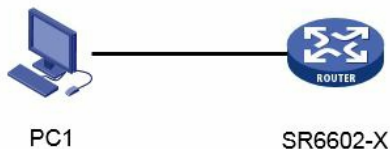

三、配置步骤:

升级V5 Bootware到V7 Bootware

- (1) 重启设备, 当出现“Press Ctrl+B to enter extended boot menu...”时, 键入, 进入Comware V5 BootWare菜单。

Press Ctrl+B to enter extended boot menu...

BootWare password: Not required. Please press Enter to continue.

Password recovery capability is enabled.

Note: The current operating device is cfa0

Enter < Storage Device Operation > to select device.

```

=====
|<1> Boot System                               |
|<2> Enter Serial SubMenu                       |
|<3> Enter Ethernet SubMenu                   |
|<4> File Control                             |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration        |
|<7> BootWare Operation Menu                 |
|<8> Clear Super Password                    |
|<9> Storage Device Operation                 |
|<0> Reboot                                  |
=====

```

Ctrl+Z: Access EXTEND-ASSISTANT MENU

Ctrl+C: Display Copyright

Ctrl+F: Format File System

Enter your choice(0-9): 7

- (2) 对于SR6602-X路由器, 需要在BootWare主菜单下键入F>, 格式化Flash再进行下一步操作

Ctrl+Z: Access EXTEND-ASSISTANT MENU

Ctrl+C: Display Copyright

Ctrl+F: Format File System

Enter your choice(0-9):

Warning:All files on flash will be lost! Are you sure to format? [Y/N]Y.....

Format success.

(3) 在BootWare主菜单下选择<7>可以进入BootWare操作子菜单:

```
=====
|Note:the operating device is cfa0          |
|<1> Backup Full BootWare                   |
|<2> Restore Full BootWare                  |
|<3> Update BootWare By Serial              |
|<4> Update BootWare By Ethernet           |
|<0> Exit To Main Menu                     |
=====
```

Enter your choice(0-4):4

(4) 在BootWare操作子菜单选择<4>, 进入以太网口配置菜单:

```
=====
|<1> Update Full BootWare                   |
|<2> Update Extend BootWare                |
|<3> Update Basic BootWare                 |
|<4> Modify Ethernet Parameter             |
|<0> Exit To Main Menu                     |
=====
```

Enter your choice(0-4):4

```
=====
|Note:  '.' = Clear field.                  |
|        '.' = Go to previous field.        |
|        Ctrl+D = Quit.                     |
=====
```

```
Protocol (FTP or TFTP) :tftp
Load File Name      :SR66V3.bin
                   :RSE-X2-CMW710.btw
Target File Name    :SR66V3.bin
                   :RSE-X2-CMW710.btw
Server IP Address   :192.168.100.4
Local IP Address    :192.168.100.11
Gateway IP Address  :192.168.100.11
FTP User Name       :liujunjie
FTP User Password   :1
```

表1-1 以太网参数设置说明

显示	说明
'.' = Clear field	快捷键: "."表示清除当前输入
'.' = Go to previous field	快捷键: "."表示返回到前一个参数域
Ctrl+D = Quit	快捷键: 表示退出参数配置界面
Protocol (FTP or TFTP)	使用的传输协议, 可以为FTP或者TFTP
Load File Name	下载文件名, 要与下载的实际文件名一致
Target File Name	存储的目标文件名。建议与服务器端文件名一致
Server IP Address	TFTP/FTP服务器的IP地址。
Local IP Address	本地IP地址, 为TFTP/FTP客户端设置的IP地址
Gateway IP Address	网关IP地址。当与服务器不在同一网段时需要配置网关地址。
FTP User Name	FTP用户名, 传输协议为TFTP时, 忽略此选项
FTP User Password	FTP用户密码, 传输协议为TFTP时, 忽略此选项

(5) 选择<1>, 下载Comware V7版本BootWare文件。

```
=====
|<1> Update Full BootWare                   |
|<2> Update Extend BootWare                |
|<3> Update Basic BootWare                 |
=====
```

<4> Modify Ethernet Parameter |
<0> Exit To Main Menu |

Enter your choice(0-4): 1

Loading.....Done!

675268 bytes downloaded!

Updating Basic BootWare? [Y/N]Y

Updating Basic BootWare.....Done!

Updating Extend BootWare? [Y/N]Y

Updating Extend BootWare.....Done!

(6) 返回BootWare主菜单, 选择<0>, 重启设备。

<1> Update Full BootWare |
<2> Update Extend BootWare |
<3> Update Basic BootWare |
<4> Modify Ethernet Parameter |
<0> Exit To Main Menu |

Enter your choice(0-4): 0

Note:the operating device is cfa0 |
<1> Backup Full BootWare |
<2> Restore Full BootWare |
<3> Update BootWare By Serial |
<4> Update BootWare By Ethernet |
<0> Exit To Main Menu |

Enter your choice(0-4): 0

<1> Boot System |
<2> Enter Serial SubMenu |
<3> Enter Ethernet SubMenu |
<4> File Control |
<5> Restore to Factory Default Configuration |
<6> Skip Current System Configuration |
<7> BootWare Operation Menu |
<8> Clear Super Password |
<9> Storage Device Operation |
<0> Reboot |

Ctrl+Z: Access EXTEND-ASSISTANT MENU

Ctrl+C: Display Copyright

Ctrl+F: Format File System

Enter your choice(0-9):0

加载Comware V7版本文件

(7) 设备重启后直接进入Comware V7 BootWare主菜单。

BootWare Validating...

Image program does not exist.

Password recovery capability is enabled.

Note: The current operating device is cfa0

Enter < Storage Device Operation > to select device.

```

|<1> Boot System |
|<2> Enter Serial SubMenu |
|<3> Enter Ethernet SubMenu |
|<4> File Control |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration |
|<7> BootWare Operation Menu |
|<8> Skip Authentication for Console Login |
|<9> Storage Device Operation |
|<0> Reboot |
=====

```

Ctrl+Z: Access EXTENDED ASSISTANT MENU

Ctrl+F: Format File System

Enter your choice(0-9):3

(8) 在BootWare主菜单下键入<3>可以进入以太网口子菜单，然后键入<5>就可以进入以太网口配置菜单：

```

|Note:the operating device is cfa0 |
|<1> Download Image Program To SDRAM And Run |
|<2> Update Main Image File |
|<3> Update Backup Image File |
|<4> Download Files(*.*) |
|<5> Modify Ethernet Parameter |
|<0> Exit To Main Menu |
| |
=====

```

Enter your choice(0-5): 5

```

|Note:  '.' = Clear field. |
|  '.' = Go to previous field. |
|  Ctrl+D = Quit. |
=====

```

Protocol (FTP or TFTP) :tftp

Load File Name :HSR68_Bootware_V5.btw
:sr66x1-rse.ipe

Target File Name :HSR68_Bootware_V5.btw
:sr66x1-rse.ipe

Server IP Address :192.168.100.4

Local IP Address :192.168.100.13

Subnet Mask :255.255.255.0

Gateway IP Address :192.168.100.13

FTP User Name :123456

FTP User Password :*****

(9) 键入<2>, 下载Comware V7启动文件:

```

|Note:the operating device is cfa0 |
|<1> Download Image Program To SDRAM And Run |
|<2> Update Main Image File |
|<3> Update Backup Image File |
|<4> Download Files(*.*) |
|<5> Modify Ethernet Parameter |
|<0> Exit To Main Menu |
| |
=====

```

Enter your choice(0-5): 2 Loading.....

.....Done.

256792576 bytes downloaded!

Loading file sr66x1-cmw710-boot-A720101.bin...Done!

copy file sr66x1-cmw710-boot-A720101.bin(pkgcode:1) to
0x22e9800@0xe0001000

Loading file sr66x1-cmw710-system-A720101.bin...Done!

copy file sr66x1-cmw710-system-A720101.bin(pkgcode:2) to
0xd1fa400@0xe22eb000

Image file sr66x1-cmw710-boot-A720101.bin is self-decompressing.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....Done.

System image is starting...Cryptographic Algorithms Known-Answer Tests are running ...

CPU 0 of slot 0 in chassis 0:

Starting Known-Answer tests in the user space.

Known-answer test for SHA1 passed.

Known-answer test for SHA224 passed.

Known-answer test for SHA256 passed.

Known-answer test for SHA384 passed.

Known-answer test for SHA512 passed.

Known-answer test for HMAC-SHA1 passed.

Known-answer test for HMAC-SHA224 passed.

Known-answer test for HMAC-SHA256 passed.

Known-answer test for HMAC-SHA384 passed.

Known-answer test for HMAC-SHA512 passed.

Known-answer test for AES passed.

Known-answer test for RSA(signature/verification) passed.

Known-answer test for RSA(encrypt/decrypt) passed.

Known-answer test for DSA(signature/verification) passed.

Known-answer test for random number generator passed.

Known-Answer tests in the user space passed.

Starting Known-Answer tests in the kernel.

Known-answer test for SHA1 passed.

Known-answer test for HMAC-SHA1 passed.

Known-answer test for AES passed.

Known-answer test for random number generator passed.

Known-Answer tests in the kernel passed.

Starting Known-Answer tests in the engine.

Known-answer test for SHA1 passed.

Known-answer test for HMAC-SHA1 passed.

Known-answer test for AES passed.

Known-answer test for RSA(signature/verification) passed.

Known-answer test for RSA(encrypt/decrypt) passed.

Known-answer test for DSA(signature/verification) passed.

Known-answer test for random number generator passed.

Known-Answer tests in the engine passed.

Cryptographic Algorithms Known-Answer Tests passed.

Line con0 is available.

Press ENTER to get started.

(11) 设备启动后，使display version命令查看设备版本，显示如下类似信息表示升级成功：

display version

H3C Comware Software, Version 7.1.054, A720101

Copyright (c) 2004-2014 Hangzhou H3C Tech. Co., Ltd. All rights reserved.

H3C SR6605-F uptime is 0 weeks, 0 days, 0 hours, 5 minutes

Last reboot reason : User reboot

Boot image: mld:/boot.bin

Boot image version: 7.1.054, A720101

Compiled May 21 2014 12:47:12

System image: mld:/system.bin

System image version: 7.1.054, A720101

Compiled May 21 2014 12:47:12

Slot 0: RSE-X2 uptime is 0 week, 0 day, 0 hour, 5 minutes

CPU type: FREESCALE P2020 1000MHz

4096M bytes DDR3 SDRAM Memory

8M bytes Flash Memory

128K bytes NVRAM

Basic Logic Version: 134.0

Extend Logic Version: 138.0

Basic BootWare Version: 2.00

Extend BootWare Version: 2.00

[FIXED PORTS] Console (Hardware)Ver.A, (Driver)1.0, (Cpld)138.0

[FIXED PORTS] AUX (Hardware)Ver.A, (Driver)1.0, (Cpld)138.0

[FIXED PORTS] MGE (Hardware)Ver.A, (Driver)1.0, (Cpld)138.0

四、配置关键点：

1. SR6602-X设备V5升级V7 Bootware时，需要先格式化Flash，而SR66X设备不需要格式化Flash；
2. SR6602-X的Bootware与SR66-X的Bootware不一样，两者不可混用；
3. 如果升级失败，希望回退V5版本，按照上述步骤，将V7 Bootware回退为V5 Bootware，然后加载V5软件版本即可；