软件升级 张轩玮 2018-11-27 发表

组网及说明

1.1 适用产品系列

本案例适用于WAC380、WAC381、MSG系列的AC。

配置步骤

1.1.1 命令行下版本升级

操作风险提示:设备有风险,操作不当或者意外断电会导致设备故障,操作需谨慎。升级完成后AP需 要重新获取新版本上线,期间可能涉及到一定的窗口时间,请预留充足的时间。

命令行升级需在PC上搭建TFTP Server(推荐用户使用3CDaemon搭建TFTP服务器),注意需要关闭 终端的防火墙和无线网卡。

将软件版本下载到设备FLASH内,然后通过命令行加载主机软件版本,加载时输入的文件名一定要一 致,建议复制黏贴,然后升级过程中避免断电重启操作。

具体操作如下:

1. 从新华三的官网下载对应设备型号的胖版本,下载到电脑后,建议修改文件名,以设备名称+版本号 为版本名称,利于后期维护。

版本下载位置在新华三官网(www.h3c.com,cn)产品支持与服务>文档与软件>软件下载>无线

2. 以MSG360-40为例子, 电脑网卡设置为: 192.168.0.1/255.255.255.0, 如下例子打开TFTP服务器, 把软件版本MSG360_40-CMW710-R5221.ipe放到电脑桌面上, TFTP服务器目录指向电脑桌面, 然 后点击确定。



3. 创建AP的ip地址, AP设置地址为192.168.0.2 255.255.255.0, 和电脑同一个网段, 保证电脑和AP网络可达。以下标黑部分为设备自动打印部分,标红加粗的命令是需要手动输入。

<H3C> system

[H3C] interface vlan1

[H3C-Vlan-interface1] ip address 192.168.0.2 255.255.255.0

[H3C-Vlan-interface1] quit

4. 通过TFTP上传MSG360_40-CMW710-R5221.ipe到msg360上, 192.168.0.1是电脑的ip。

<H3C> tftp 192.168.0.1 get MSG360_40-CMW710-R5221.ipe

File will be transferred in binary mode.

Downloading file from remote tftp server, please wait.....

TFTP: 4602950 bytes received in 115 second(s).

File downloaded successfully.

备注:如果提示FLASH空间不足已放下新版本请将老版本删除,删除后请勿重启,否则设备已无系统

,只能通过bootrom升级。

<H3C>delete /unreserved boot.bin

<H3C>delete /unreserved system.bin

//如果空间不够,可以删除原有的软件版本释放存储空间

<H3C> tftp 192.168.0.1 get MSG360_40-CMW710-R5221.ipe

加载主机软件

<H3C> boot-loader file flash:/MSG360_40-CMW710-R5221.ipe main

<H3C> reboot

重启设备完成后就可以使用设备管理地址登录MSG360进行管理,查看版本是否升级成功,命令行下 通过命令<H3C>display version查看版本是否升级到指定的版本

1.1.2 Bootrom下版本升级

1. 使用Console口登入到命令行,从官网下载MSG360-40的软件版本,将压缩包解压,将里面的文件

名称修改为MSG360_40-CMW710-R5221.ipe

2. 电脑网卡设置为: 192.168.0.1 255.255.255.0, 如下例子打开TFTP服务器,把软件版本WA2600a_f at.bin放到电脑桌面上,TFTP服务器目录指向电脑桌面,然后点击确定

TFIP Server	Start Time P	eer Bytes St	tatus		
onfigure ITIP Server 1	May 30, 2016 11:20:26 lo	ucal 0 Lis	istening for TFTP requests on IP address: 10.88	1.18.160, Port 69	
IFTP Server is started. Click here to step it.	300	aemon Config	guration		
Legene to Tryd Jag Click to step Bit dobgene Click to step Click to ster.		In Frences Synce Configuration Synce Configuration General Configuration Create directory masss in incoming file rd 2 Allow overwrite of existing files? Synce/Second Configuration Perspaces The synce of the sync		RES文件央 Select * Birectory ● 保険 ● 保険 ● 保険 ● 目前 ● 保険 ● 目前 ● 目前	
Vier Logfbebag files.	30	Daemon		<u></u>	

3. 在MSG360重启的时候按住Ctrl+B进入设备的bootroom菜单,以下标黑部分为设备自动打印部分,标红加粗的命令是需要手动输入。

|<1> Boot System
|<2> Enter Serial SubMenu

|<3> Enter Ethernet SubMenu

|<4> File Control

|<5> Restore to Factory Default Configuration

<6> Skip Current System Configuration

<7> BootWare Operation Menu

<8> Clear Super Password

|<9> Storage Device Operation

<0> Reboot

Ctrl+C: Display Copyright

Ctrl+F: Format File System

Enter your choice(0-9):3 (此处输入)

Note:the operating device is flash

|<1> Download Application Program To SDRAM And Run

|<2> Update Main Application File

|<3> Update Backup Application File

|<4> Update Secure Application File

|<5> Modify Ethernet Parameter

|<0> Exit To Main Menu

|<Ensure The Parameter Be Modified Before Downloading!>

4. 进入修改以太网参数菜单,使用TFTP网络协议传输MSG360_40-CMW710-R5221.ipe到MSG360上

Enter your choice(0-5): 5

=====<ETHERNET PARAMETER SET>=================

Note: '.' = Clear field.

| '-' = Go to previous field.

Ctrl+D = Quit.

Protocol (FTP or TFTP) : TFTP

//忽略输出内容,直接输入TFTP,然后回车
Load File Name **iMSG360_40-CMW710-R5221.ipe**//忽略输出内容,直接输入MSG360_40-CMW710-R5221.ipe,然后回车
Target File Name **iMSG360_40-CMW710-R5221.ipe**//忽略输出内容,直接输入MSG360_40-CMW710-R5221.ipe,然后回车
Server IP Address **:192.168.0.1**//忽略输出内容,直接输入电脑主机的 IP,比如192.168.0.1,然后回车
Local IP Address **:192.168.0.50**//忽略输出内容,直接输入和电脑主机的ip同一网段,比如192.168.0.50,然后回车
Gateway IP Address :0.0.0
//忽略输出内容,直接回车

_____ Enter your choice(0-5): 2 //此时可以看到TFTP服务器上数据上传的滚动 Loading.....Done! 5. 返回主菜单 Note: the operating device is flash |<1> Download Image Program To SDRAM And Run |<2> Update Main Image File |<3> Update Backup Image File |<4> Download Files(*.*) |<5> Modify Ethernet Parameter |<0> Exit To Main Menu |<Ensure The Parameter Be Modified Before Downloading!> |-----Enter your choice(0-5): 0 6. 回到主菜单,使用上传的版本重启 <1> Boot System |<2> Enter Serial SubMenu |<3> Enter Ethernet SubMenu |<4> File Control |<5> Restore to Factory Default Configuration <6> Skip Current System Configuration |<7> BootWare Operation Menu <8> Skip Authentication for Console Login |<9> Storage Device Operation |<0> Reboot Enter your choice(0-9): 0 System is starting... 重启设备完成后就可以使用设备管理地址登录MSG360进行管理,查看版本是否升级成功,命令行下 通过命令 <H3C>display version H3C Comware Software, Version 7.1.064, Release 5221 配置关键点