

知 NS200系列交换机如何查看IP地址?

IPv6 IPv4 肖宁 2018-12-24 发表

问题描述

NS200系列交换机如何查看IP地址?

解决方法

通过console口下查看

```
!@H3C@!summary
```

```
Select menu option: Summary
```

```
IP Method: Manual IP address: 192.168.1.1
```

```
Subnet mask: 255.255.255.0
```

```
Default gateway:
```

```
IPv6 Method:
```

```
IPv6 link-local address:
```

```
IPv6 subnet mask length:
```

```
IPv6 global address:
```

```
IPv6 subnet mask length:
```

```
IPv6 default gateway:
```

```
Software images on slot 1:
```

```
Current software images:
```

```
flash:/ns200-cmw710-boot-r3109p05.bin
```

```
flash:/ns200-cmw710-system-r3109p05.bin
```

```
Main startup software images:
```

```
flash:/ns200-cmw710-boot-r3109p05.bin
```

```
flash:/ns200-cmw710-system-r3109p05.bin
```

```
Backup startup software images:
```

```
None
```