

## 知 ACG1000系列设备查看STP状态命令?

ACG1000 张旭 2018-12-26 发表

### 问题描述

ACG1000系列设备查看STP状态命令?

### 解决方法

查看STP状态:

```
H3CACG1000# show bridge-group 1
```

```
Bridge: bvi1
```

```
STP: enabled
```

```
bridge id : 8000.002145c15608
```

```
designated root : 8000.002145c15608
```

```
Ageing time: 300
```

```
Hello time: 2
```

```
Max age: 20
```

```
Forward delay: 15
```

```
Bridge ports:
```

```
ge9
```

```
ge8
```