

知 如何查看设备接口mac地址?

以太网接口 骆翔 2019-01-03 发表

问题描述

如何查看设备接口mac地址?

解决方法

可以通过查看接口命令查看该接口的mac:

```
<H3C>display interface Ethernet 0/1
Ethernet0/1 current state :DOWN
Line protocol current state :DOWN
Description : WCN_INTERFACE_LAN
The Maximum Transmit Unit is 1500, Hold timer is 10(sec)
Internet protocol processing : disabled
IP Sending Frames' Format is PKTFMT_ETHNT_2, Hardware address is 80f6-2ece-bf4c
Media type is twisted pair, loopback not set, promiscuous mode set
100Mb/s, Full-duplex, link type is force link
Output flow-control is enabled, input flow-control is enabled
Output queue : (Urgent queuing : Size/Length/Discards) 0/50/0
Output queue : (Protocol queuing : Size/Length/Discards) 0/500/0
Output queue : (Class Based queuing : Size/Discards) 0/0
  Queue Size: 0/0/0 (EF/AF/BE)
  BE queues: 0/0/256 (Active/Max active/Total)
  AF queues: 1 (Allocated)
Bandwidth(Kbps): 79000/80000 (Available/Max reserve)
```