

知 如何配置静态路由？

静态路由 骆翔 2019-01-03 发表

问题描述

如何配置静态路由？

扩展：如何删除静态路由？

解决方法

使用undo ip route-static命令可以删除一条静态路由，而使用delete static-routes all命令可以删除包括缺省路由在内的所有静态路由。

```
<H3C>system-view
```

```
System View: return to User View with Ctrl+Z.
```

```
[H3C]ip route-static 10.1.1.0 255.255.255.0 192.168.1.2 //新增一条静态路由
```

```
[H3C]undo ip route-static 10.1.1.0 255.255.255.0 192.168.1.1 //删除静态路由
```

若是在WEB界面可以在左边概览“高级配置”-“路由设置”点击“创建”或“删除”页面进行修改。

The screenshot shows a web-based configuration interface for static routes. At the top, there are three tabs: '显示' (Display), '创建' (Create), and '删除' (Delete). The '创建' tab is active. The main area contains several input fields and checkboxes:

- '目的IP地址' (Destination IP Address): A text input field.
- '掩码' (Mask): A text input field.
- '下一跳' (Next Hop): A text input field.
- '优先级' (Priority): A checkbox, currently unchecked.
- '接口' (Interface): A checkbox, currently unchecked.
- 'Aux0': A dropdown menu.
- '(1-255, 缺省=60)': A text field indicating the priority range and default value.

At the bottom left, there is a note: '星号 (*) 为必填填写项' (Asterisk (*) indicates required fields). At the bottom right, there is a '确定' (Confirm) button.