

V7平台设备自定义用户权限只能执行tftp上传下载命令

RBAC 马雷勇 2019-05-08 发表

组网及说明

无

配置步骤

```
#  
role name 123  
rule 1 permit command tftp * get *          //从tftp服务器上下载文件  
rule 2 permit command tftp * put *          //从设备上往tftp服务器上传文件  
#  
local-user 123 class manage  
password simple 123  
service-type telnet ssh  
authorization-attribute user-role 123  
#
```

测试效果

```
Login: 123  
Password:  
<H3C>  
User view commands:  
  quit      Exit from current command view  
  system-view Enter the System View  
  tftp       Open a TFTP connection  
  
<H3C>sys  
System View: return to User View with Ctrl+Z.  
[H3C]  
System view commands:  
  quit      Exit from current command view  
  return   Exit to User View  
  
[H3C]  
<H3C>tftp ?  
  STRING<1-253> IP address or hostname of the TFTP Server  
  ipv6      IPV6 TFTP Client  
  
<H3C>tftp 10.88.14.189 ?  
  get      Download a file from the TFTP server  
  put      Upload a local file to the TFTP server  
  sget     Download a file from the TFTP server securely  
  
<H3C>tftp 10.88.14.189 put 1.txt  
Press CTRL+C to abort.  
  % Total  % Received % Xferd  Average Speed  Time  Time  Time  Current  
  % Total  % Received % Xferd  Dload  Upload  Total  Spent  Left  Speed  
100 88045    0      0  100 88045      0  135k --:--:-- --:--:-- 144k  
<H3C>
```

配置关键点

- 1、undo authorization-attribute user-role network-operator
- 2、command命令中用*匹配任意