

## 知 S5000PV2/5120系列交换机切换用户角色配置方法

Telnet 肖梦茹 2019-08-16 发表

### 组网及说明

#### 1 配置需求或说明

##### 1.1 适用产品系列

本案例适用于如S5008PV2-EI、S5024PV2-EI-PWR、S5048PV2-EI-HPWR、S5120-52P-LI、S5120-28P-SI、S5120-48P-EI等S5000PV2、S5120系列的交换机。

##### 1.2 配置需求

Switch管理VLAN是VLAN2，开启了Telnet功能。Telnet用户主机与Switch相连，配置telnet登录用户的权限为level-1，配置超级密码的用户登录权限为level 3，用户可以通过super命令切换用户角色从而对设备配置进行操作。

#### 2 组网图



### 配置步骤

#### 3 配置步骤

##### 3.1 Switch配置

# 创建管理VLAN。

```
<H3C> system-view
```

#设置交换机系统名称为Switch

```
[H3C]sysname Switch
```

```
[Switch] vlan 2
```

```
[Switch-vlan2]quit
```

# 设置交换机管理地址。

```
[Switch]interface Vlan-interface 2
```

```
[Switch-Vlan-interface2]ip address 1.1.1.1 255.255.255.0
```

```
[Switch-Vlan-interface2]quit
```

# 设置交换机连接Router的接口加入VLAN2。

```
[H3C]interface g1/0/1
```

```
[H3C-GigabitEthernet1/0/1]port link-type access
```

```
[H3C-GigabitEthernet1/0/1]port access vlan 2
```

```
[H3C-GigabitEthernet1/0/1]quit
```

# 开启telnet功能。

```
[Switch]telnet server enable
```

# 配置使用帐号+密码方式进行telnet认证。

```
[Switch] user-interface vty 0 4
```

```
[Switch-ui-vty0-4]authentication-mode scheme
```

```
[Switch-ui-vty0-4]quit
```

# 创建admin帐号。

```
[Switch]local-user admin
```

# 配置帐号的服务类型为telnet。

```
[Switch-luser-admin]service-type telnet
```

# 配置帐号的密码为admin。

```
[Switch-luser-admin]password simple admin
```

#赋予帐号最高权限。

```
[Switch-luser-admin] authorization-attribute level 1
```

```
[Switch-luser-admin]quit
```

# 配置最高权限用户角色切换的密码。

```
[Switch] super password level 3 simple 12345
```

#保存配置

```
[Switch]save force
```

##### 3.2 Router配置

#设置交换机系统名称为Router

```
[H3C]sysname Router
```

#Router配置接口地址，保证能和Switch互通

```
[Router]interface GigabitEthernet 0/0
```

```
[Router-GigabitEthernet0/0]ip address 1.1.1.2 255.255.255.0
```

```
[Router-GigabitEthernet0/0]quit
```

```
#保存配置
```

```
[Router]save force
```

### 3.3 验证配置

1) Router使用admin帐号 telnet登录Switch测试, 缺省情况下, 监控级level 1的命令包括: display、debugging、terminal、refresh、send等。

```
<Router>telnet 1.1.1.1
Trying 1.1.1.1 ...
Press CTRL+K to abort
Connected to 1.1.1.1 ...
*****
* Copyright (c) 2004-2010 Hangzhou H3C Tech. Co., Ltd. All rights reserved. *
* Without the owner's prior written consent,                               *
* no decompiling or reverse-engineering shall be allowed.                 *
*****

Login authentication

Username:admin
Password:
<Switch>sys

% Unrecognized command found at '' position.
<Switch>display ?
  acl                Specify acl configuration information
  archive            Display archive information
  arp                Display ARP information
  bootp              BOOTP Protocol
  brief              Brief information of status and configuration for
                    interface(s)
  cfd                Connectivity fault detection (IEEE 802.1ag)
  channel            Informational channel status and configuration
                    information
  clipboard          Clipboard status and configuration information
  clock              Clock status and configuration information
  cluster            Cluster status and configuration information
  command-alias      Specify command alias
  component          All registered component information
  connection         Display connection information
  cpu-usage          Cpu usage information
  debugging          Current setting of debugging switches
  dhcp              Dynamic Host Configuration Protocol and BOOTP
                    debugging functions
  dhcp-snooping      DHCP Snooping
  diagnostic-information System information for diagnosis
  dldp              DLDAP status and configuration information
  dns                DNS status and configuration information
  ---- More ----
```

2) Router使用super命令切换用户到level 3, 可以执行任何命令:

```
<Router>telnet 1.1.1.1
Trying 1.1.1.1 ...
Press CTRL+K to abort
Connected to 1.1.1.1 ...
*****
* Copyright (c) 2004-2010 Hangzhou H3C Tech. Co., Ltd. All rights reserved. *
* Without the owner's prior written consent,                               *
* no decompiling or reverse-engineering shall be allowed.                 *
*****

Login authentication

Username:admin
Password:
<Switch>sys

% Unrecognized command found at '' position.
<Switch>super 3
Password:
User privilege level is 3, and only those commands can be used
whose level is equal or less than this.
Privilege note: 0-VISIT, 1-MONITOR, 2-SYSTEM, 3-MANAGE
<Switch>sys
System View: return to User View with Ctrl+Z.
[Switch]
```

配置关键点