

组网及说明

不涉及

配置步骤

1、首先升级扩展boot版本，要求boot版本必须为对应版本配套的7.18版本，版本文件中可获取

启动后Ctrl+B进入bootware，选择7进入bootware操作子菜单

```
*****
*                                     *
*           H3C WA5320 BootWare, Version 7.15           *
*                                     *
*****
```

Copyright (c) 2004-2018 New H3C Technologies Co., Ltd.

```
Compiled Date   : Aug 21 2018
CPU Type       : ARM
CPU L1 Cache   : 32KB
CPU L2 Cache   : 256KB
CPU Clock Speed : 710MHz
Memory Type    : DDR3 SDRAM
Memory Size    : 256MB
Memory Speed   : 533MHz
Flash Size     : 32MB
PCB Version    : Ver.B
```

BootWare Validating...
Press Ctrl+B to access EXTENDED-BOOTWARE MENU...

Password recovery capability is enabled.
Note: The current operating device is flash
Enter < Storage Device Operation > to select device.

```
=====
|<1> Boot System                |
|<2> Enter Serial SubMenu       |
|<3> Enter Ethernet SubMenu    |
|<4> File Control               |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration |
|<7> BootWare Operation Menu   |
|<8> Skip Authentication for Console Login |
|<9> Storage Device Operation  |
|<0> Reboot                    |
=====
```

Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
Enter your choice(0-9): 7

选择4设置更新bootware方式通过网线

```
=====
|Note:the operating device is flash |
|<1> Backup Full BootWare         |
|<2> Restore Full BootWare       |
|<3> Update BootWare By Serial   |
|<4> Update BootWare By Ethernet |
|<0> Exit To Main Menu          |
=====
```

=====

Enter your choice(0-4): 4

选择4设置上传配置

=====

- |<1> Update Full BootWare |
- |<2> Update Extended BootWare |
- |<3> Update Basic BootWare |
- |<4> Modify Ethernet Parameter |
- |<0> Exit To Main Menu |

=====

Enter your choice(0-4): 4

设置上传文件名，此处是更新bootware，需上传boot文件；设置IP地址

=====

|Note: "." = Clear field. |

| "-" = Go to previous field. |

| Ctrl+D = Quit. |

=====

Protocol (FTP or TFTP) :tftp

Load File Name :wa5300.ipe
:apwa5300_v7.18.btw

Target File Name :wa5300.ipe
:apwa5300_v7.18.btw

Server IP Address :192.168.0.99 10.0.0.233

Local IP Address :192.168.0.98 10.0.0.2

Subnet Mask :255.255.255.0

Gateway IP Address :0.0.0.0

选择1更新bootware

=====

- |<1> Update Full BootWare |
- |<2> Update Extended BootWare |
- |<3> Update Basic BootWare |
- |<4> Modify Ethernet Parameter |
- |<0> Exit To Main Menu |

=====

Enter your choice(0-4): 1

Loading.....Done.

1233920 bytes downloaded!

Updating Basic BootWare? [Y/N]Y

Updating Basic BootWare.....Done.

Updating Extended BootWare? [Y/N]Y

Updating Extended BootWare.....Done.

更新完成后选择0退回主界面并reboot

=====

- |<1> Update Full BootWare |
- |<2> Update Extended BootWare |
- |<3> Update Basic BootWare |
- |<4> Modify Ethernet Parameter |
- |<0> Exit To Main Menu |

=====

Enter your choice(0-4): 0

=====

|Note:the operating device is flash |

- |<1> Backup Full BootWare |
- |<2> Restore Full BootWare |
- |<3> Update BootWare By Serial |
- |<4> Update BootWare By Ethernet |
- |<0> Exit To Main Menu |

=====

=====
Enter your choice(0-4): 0

=====
|<1> Boot System |
<2> Enter Serial SubMenu	
<3> Enter Ethernet SubMenu	
<4> File Control	
<5> Restore to Factory Default Configuration	
<6> Skip Current System Configuration	
<7> BootWare Operation Menu	
<8> Skip Authentication for Console Login	
<9> Storage Device Operation	
<0> Reboot	
=====

=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU

Ctrl+F: Format File System

Ctrl+C: Display Copyright

Ctrl+Y: Change AP Mode

Enter your choice(0-9): 0

System is starting...

Press Ctrl+D to access BASIC-BOOTWARE MENU

Booting Normal Extended BootWare

The Extended BootWare is self-decompressing.....

.Done.

重启完成后查看bootwre版本为7.18，再次Ctrl+B进入bootware，Ctrl+F格式化flash，此处注意需要格式化，避免空间不足导致版本解压失败

* *
* H3C WA5320 BootWare, Version 7.18 *
* *

Copyright (c) 2004-2019 New H3C Technologies Co., Ltd.

Compiled Date : Mar 8 2019

CPU Type : ARM

CPU L1 Cache : 32KB

CPU L2 Cache : 256KB

CPU Clock Speed : 710MHz

Memory Type : DDR3 SDRAM

Memory Size : 256MB

Memory Speed : 533MHz

Flash Size : 32MB

PCB Version : Ver.B

BootWare Validating...

Press Ctrl+B to access EXTENDED-BOOTWARE MENU...

Password recovery capability is enabled.

Note: The current operating device is flash

Enter < Storage Device Operation > to select device.

=====
|<1> Boot System |
<2> Enter Serial SubMenu	
<3> Enter Ethernet SubMenu	
<4> File Control	
<5> Restore to Factory Default Configuration	
<6> Skip Current System Configuration	
<7> BootWare Operation Menu	
<8> Skip Authentication for Console Login	
<9> Storage Device Operation	

```
|<0> Reboot |
=====
=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
Enter your choice(0-9):
Warning:All files on flash will be lost! Are you sure to format? [Y/N]Y.....
.....
.....
Format success.
```

格式化完成后选择3进入ethernet子菜单

```
=====
|<1> Boot System |
|<2> Enter Serial SubMenu |
|<3> Enter Ethernet SubMenu |
|<4> File Control |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration |
|<7> BootWare Operation Menu |
|<8> Skip Authentication for Console Login |
|<9> Storage Device Operation |
|<0> Reboot |
=====
=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
Enter your choice(0-9): 3
```

选5设置有线网络配置，上传之前需要把胖AP版本文件名改成wa5300-oasis.ipe

```
=====
|Note:the operating device is flash |
|<1> Download Image Program To SDRAM And Run |
|<2> Update Main Image File |
|<3> Update Backup Image File |
|<4> Download Files(*.*) |
|<5> Modify Ethernet Parameter |
|<0> Exit To Main Menu |
| |
=====
=====
Enter your choice(0-5): 5
```

```
=====
|Note: "." = Clear field. |
| "-" = Go to previous field. |
| Ctrl+D = Quit. |
=====
=====
```

```
Protocol (FTP or TFTP) :tftp
Load File Name :apwa5300_v7.18.btw
:wa5300-oasis.ipe
Target File Name :apwa5300_v7.18.btw
:wa5300-oasis.ipe
Server IP Address :10.0.0.233
Local IP Address :10.0.0.2
Subnet Mask :255.255.255.0
Gateway IP Address :0.0.0.0
```

配置完成后选择2，更新主版本文件

```
=====
```


Booting Normal Extended BootWare
The Extended BootWare is self-decompressing.....
.Done.

```
*****  
*                                     *  
*           H3C WA5320 BootWare, Version 7.18           *  
*                                     *  
*****
```

Copyright (c) 2004-2019 New H3C Technologies Co., Ltd.

Compiled Date : Mar 8 2019
CPU Type : ARM
CPU L1 Cache : 32KB
CPU L2 Cache : 256KB
CPU Clock Speed : 710MHz
Memory Type : DDR3 SDRAM
Memory Size : 256MB
Memory Speed : 533MHz
Flash Size : 32MB
PCB Version : Ver.B

BootWare Validating...
Press Ctrl+B to access EXTENDED-BOOTWARE MENU...
Loading the main image files...
Loading file flash:/wa5300-oasis-system.bin.....
.....
.....
Done.
Loading file flash:/wa5300-oasis-boot.bin.....
Done.

Image file flash:/wa5300-oasis-boot.bin is self-decompressing.....
.....
.....
.....
.....
.....
.....Done.
System image is starting...

Startup configuration file doesn't exist or is invalid.
Line con0 is available.

Press ENTER to get started.
至此设备启动完成

配置关键点

- 1.需要升级设备bootware版本至7.18
- 2.升级完bootware后需要格式化Flash
- 3.对应版本文件需要修改成wa5300-oasis.ipe

云AP是Fat AP。初次使用云AP，给云AP上电后，云AP会默认开启4个无线服务：

- 其中一个称之为管理WIFI，也称内部WIFI，SSID为H3C_XXXXXX，XXXXXX为设备mac地址后六位。管理WIFI供商铺内部员工管理使用，一般在2.4G频段工作，当设备未连接到绿洲时，通过连接管理WIFI在浏览器输入10.40.94.1或myap.h3c.com访问本地web页面可进行本设备下的无线服务管理配置，一旦连接上绿洲，将只能通过绿洲平台进行统一的无线服务配置管理。
- 其余3个称为用户WIFI，也称商业WIFI，SSID为H3C_WiFi_1、H3C_WiFi_2、H3C_WiFi_3，不加密，不认证，不隐藏。当设备连接到外网，可为已经连接上用户WIFI的用户提供上网服务。