

## 组网及说明

WX3000E系列切换切换交换板密码忘记

## 配置步骤

WX3000E系列AC，用命令oap connect slot 0 切换至交换板的密码忘记了，telnet登陆交换板的密码也忘记了，可以采取跳过AC板跟交换板的配置重新启动来修改配置解决。

### 一、wx3000

3000 (3010、3024、3008) 交换侧与无线侧共用忽略配置启动标志。

重启设备，ctrl+b进入bootware菜单选择6忽略配置，两侧同时忽略。

### 二、wx3000E(3010e、3024e):

1.ac侧，端口1配置成shutdown

```
[H3C]interface GigabitEthernet 1/0/1
```

```
[H3C-GigabitEthernet1/0/1]shutdown
```

2. ac侧，保持配置

```
<H3C>save
```

3. 重启设备

4. 重启后，由于端口1是down的，交换侧获取不到版本一起在request状态，o c s 0登录交换侧应该是下面的这个态

```
<H3C>o c s 0
```

```
Press CTRL+K to quit.
```

```
Connected to OAP.
```

```
Request File:
```

```
Request File:
```

```
Request File:
```

```
Request File:
```

```
Request File:
```

```
Request File:
```

```
Request File:
```

```
Request File:
```

```
Request File:
```

```
Request timer out!
```

```
System restart now
```

Starting.....

<---- 5. 交换侧长时间获取不到版本会重启本侧，等待启动时ctrl+b进入bootware，选6 skip配置，然后选0，重启交换侧Press Ctrl+D to access BASIC-BOOTWARE MENU

Booting Normal Extend BootWare....

The Extend BootWare is self-decompressing.....Done!

\*\*\*\*\*

```
*                               *
*                               *
*      H3C WX3010E-LSW BootWare, Version 2.0      *
*                               *
*                               *
```

\*\*\*\*\*

Copyright (c) 2004-2013 Hangzhou H3C Technologies Co., Ltd.

Compiled Date : Jan 8 2013

CPU Type : 98DXH325

CPU L1 Cache : 32KB

CPU Clock Speed : 333MHz

Memory Type : DDR2 SDRAM

Memory Size : 128MB

Flash Size : 16MB

CPLD Version : 002

PCB Version : Ver.C

Mac Address : 5CDD7035C775

Press Ctrl+B to enter extended boot menu...

BootWare password: Not required. Please press Enter to continue.

Password recovery capability is enabled.

Note: The current operating device is flash

Enter < Storage Device Operation > to select device.

=====<EXTEND-BOOTWARE MENU>=====

- <1> Boot System |
- <2> Enter Serial SubMenu |
- <3> Enter Ethernet SubMenu |
- <4> File Control |
- <5> Restore to Factory Default Configuration |

```
|<6> Skip Current System Configuration          |
|<7> BootWare Operation Menu                  |
|<8> Clear Super Password                    |
|<9> Storage Device Operation                |
|<0> Reboot                                  |
```

=====

Ctrl+Z: Access EXTEND-ASSISTANT MENU

Ctrl+F: Format File System

Enter your choice(0-9): 6

=====<EXTEND-BOOTWARE MENU>=====

```
|<1> Boot System                              |
|<2> Enter Serial SubMenu                    |
|<3> Enter Ethernet SubMenu                 |
|<4> File Control                            |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration      |
|<7> BootWare Operation Menu                |
|<8> Clear Super Password                   |
|<9> Storage Device Operation                |
|<0> Reboot                                  |
```

=====

Ctrl+Z: Access EXTEND-ASSISTANT MENU

Ctrl+F: Format File System

Enter your choice(0-9): 0

Starting.....

Press Ctrl+D to access BASIC-BOOTWARE MENU

Booting Normal Extend BootWare....

The Extend BootWare is self-  
decompressing.....Done!

.....

6. ctrl+k退回到无线侧，将端口1，undo shutdown，交换侧开始获取版本并跳过配置启动；

