

HP-UX平台 iSCSI Initiator软件的安装和配置

1.安装:

以root用户登陆, 将iSCSI-00_B.11.23.03e_HP-UX_B.11.23_IA+PA.depot软件包拷贝到/tmp目录下

```
# swlist -d @ /tmp/iSCSI-00_B.11.23.03e_HP-UX_B.11.23_IA+PA.depot
# swinstall -x autoreboot=true -s /tmp/iSCSI-00_B.11.23.03e_HP-UX_B.11.23_IA+PA.depot iSCSI-00
```

验证安装, 执行如下命令:

```
1) # swlist iSCSI-00
```

如果 HP-UX 11iv2 iSCSI Software Initiator 正确安装, 则显示如下信息:

```
# Initializing...
# Contacting target "HPUX2"...
#
# Target: HPUX2:/
#
# iSCSI-00      B.11.23.03e  HP-UX iSCSI Software Initiator
# iSCSI-00.ISCSI-SWD  B.11.23.03e  HP-UX iSCSI Software Initiator
2) # ioscan -kfnC iscsi
```

应显示如下信息:

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
iscsi	0	255/0	iscsi	CLAIMED	VIRTBUS	iSCSI Virtual Node

2.配置

```
# cd /opt/iscsi/bin
查看initiator的名称
./iscsiutil -l
加入target的IP
# ./iscsiutil -a -l 201.201.10.200
检查配置好的target
# ./iscsiutil -p -D
发现iSCSI设备
# /usr/sbin/ioscan -H 255
创建设备文件
# /usr/sbin/insf -H 255
显示可操作的target
# iscsiutil -p -O
重启操作系统后, 执行
# /sbin/init.d/iscsi stop
# /sbin/init.d/iscsi start
# ioscan -knfC disk
```

显示如下:

Class	I	H/W Path	Driver	S/W State	H/W Type	Description
disk	0	0/0/2/0.0.0.0	sdisk	CLAIMED	DEVICE	TEAC DV-28E-N /dev/dsk/c0t0d0 /dev/rdisk/c0t0d0
disk	1	0/1/1/0.0.0.0	sdisk	CLAIMED	DEVICE	HP 73.4GST373454LC /dev/dsk/c2t0d0 /dev/rdisk/c2t0d0
disk	2	0/1/1/0.1.0	sdisk	CLAIMED	DEVICE	HP 73.4GST373454LC /dev/dsk/c2t1d0 /dev/dsk/c2t1d0s2 /dev/rdisk/c2t1d0 /dev/rdisk/c2t1d0s2 /dev/dsk/c2t1d0s1 /dev/dsk/c2t1d0s3 /dev/rdisk/c2t1d0s1 /dev/rdisk/c2t1d0s3
disk	7	255/0/4.0.0.0	sdisk	CLAIMED	DEVICE	H3C IP SAN /dev/dsk/c8t0d0 /dev/rdisk/c8t0d0

使用SAM工具, 创建文件系统和挂载点

