

### AR28/46系列路由器查看系统资源方法

#### 1.查看cpu占用率

<Quidway>display cpu-usage

===== Current CPU usage info =====

CPU Usage Stat. Cycle: 20 (Second)

CPU Usage : 9%

CPU Usage Stat. Time : 2004-12-15 11:42:40

CPU Usage Stat. Tick : 0x20(CPU Tick High) 0xe3d941a2(CPU Tick Low)

Actual Stat. Cycle : 0x0(CPU Tick High) 0x1e6bf2b7(CPU Tick Low)

| TaskName | CPU | Runtime(CPU Tick High/CPU Tick Low) |
|----------|-----|-------------------------------------|
| VIDL     | 91% | 0/1bd0824b                          |
| TICK     | 0%  | 0/ 4626e2                           |
| FTPS     | 1%  | 0/ 6fea2b                           |
| INFO     | 0%  | 0/ 7f65                             |
| ROUT     | 0%  | 0/ 94573                            |
| SOCK     | 0%  | 0/ b1776                            |
| VTYD     | 0%  | 0/ 76f51                            |
| IPSP     | 0%  | 0/ 2c29                             |
| IKE      | 0%  | 0/ 1c72                             |
| TAC      | 0%  | 0/ 90464                            |
| SC       | 0%  | 0/ 75f9a                            |
| RDS      | 0%  | 0/ 68348                            |
| ACM      | 0%  | 0/ 897db                            |
| LSSO     | 0%  | 0/ 176c8                            |
| TRAP     | 0%  | 0/ 98e4                             |
| NTPT     | 1%  | 0/ 8e6fe2                           |
| PIMT     | 0%  | 0/ 16444                            |
| LSPM     | 0%  | 0/ 57518                            |
| L2V      | 0%  | 0/ 665b6                            |
| IPP      | 0%  | 0/ 6df1                             |
| co0      | 2%  | 0/ 9f57af                           |
| IPS      | 0%  | 0/ 33d1d7                           |
| SIP      | 0%  | 0/ 34ed02                           |
| DHCP     | 0%  | 0/ 1905b                            |
| DHCC     | 0%  | 0/ 17890                            |

#### 2.查看内存占用率

<Quidway>display memory

System Available Memory(bytes): 63816192

System Used Memory(bytes): 23793680

Used Rate: 37%