


Secpath1800F Vlan透传功能的配置

一、组网需求:

三个（多个）交换机通过Trunk的方式连接Secpath1800F，正常实现Vlan之间的通信和访问控制

二、组网图:

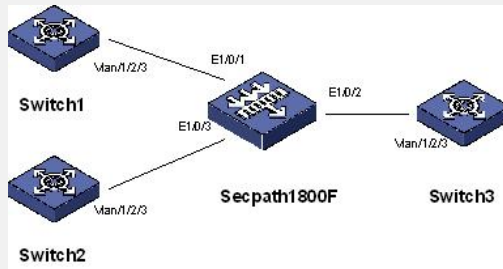

三、配置步骤:

适用版本: Secpath1800F 所有VRP版本

```
#
sysname Secpath1800F
#
// 定义域间规则
firewall packet-filter default permit interzone local trust direction inbound
firewall packet-filter default permit interzone local trust direction outbound
firewall packet-filter default permit interzone local untrust direction inbound
firewall packet-filter default permit interzone local untrust direction outbound
firewall packet-filter default permit interzone local dmz direction inbound
firewall packet-filter default permit interzone local dmz direction outbound
firewall packet-filter default permit interzone trust untrust direction inbound
firewall packet-filter default permit interzone trust untrust direction outbound
firewall packet-filter default permit interzone trust dmz direction inbound
firewall packet-filter default permit interzone trust dmz direction outbound
firewall packet-filter default permit interzone dmz untrust direction inbound
firewall packet-filter default permit interzone dmz untrust direction outbound
#
firewall mode transparent // 设置防火墙模式为透明模式
#
firewall statistic system enable
#
interface Aux0
async mode flow
link-protocol ppp
#
interface Ethernet0/0/0
#
interface Ethernet0/0/1
#
interface Ethernet1/0/0
#
interface Ethernet1/0/1 // 设置端口可以透传的Vlan
port trunk allow-pass vlan 10 20 30
#
interface Ethernet1/0/2 // 设置端口可以透传的Vlan
port trunk allow-pass vlan 10 20 30
```

```
#
interface Ethernet1/0/3      // 设置端口可以透传的Vlan
port trunk allow-pass vlan 10 20 30
#
interface Ethernet1/0/4
#
interface Ethernet1/0/5
#
interface Ethernet1/0/6
#
interface Ethernet1/0/7
#
interface NULL0
#
firewall zone local
set priority 100
#
firewall zone trust          // 端口加入域
set priority 85
add interface Ethernet1/0/1
add interface Ethernet1/0/3
#
firewall zone untrust       // 端口加入域
set priority 5
add interface Ethernet1/0/2
#
firewall zone dmz
set priority 50
#
firewall interzone local trust
#
firewall interzone local untrust
#
firewall interzone local dmz
#
firewall interzone trust untrust
#
firewall interzone trust dmz
#
firewall interzone dmz untrust
#
aaa
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
user-interface con 0
```

四、配置关键点:

无。