

### H3C S9500交换机如何查看单板类型

Q: H3C S9500交换机如何查看单板类型?

A: 在单板面板的右上角印有单板类型的丝印如“SRP1N4”、“GP12B”等。通过命令display device也可以查看单板类型、单板状态、单板的子卡数、单板上运行的软件版本:

<S9500>display device

Slot No.	Brd Type	Brd Status	Subslot Num	Sft Ver
0	LSB1SRPC	Master	0	S9500-CMW310-r1278
1	NONE	Absent	Absent	None
2	LSB1GP12B0	Normal	3	S9500-CMW310-r1278
3	LSB1GP12B0	Normal	3	S9500-CMW310-r1278
4	LSB1FT48B0	Normal	1	S9500-CMW310-r1278
5	NONE	Absent	Absent	None
6	NONE	Absent	Absent	None